



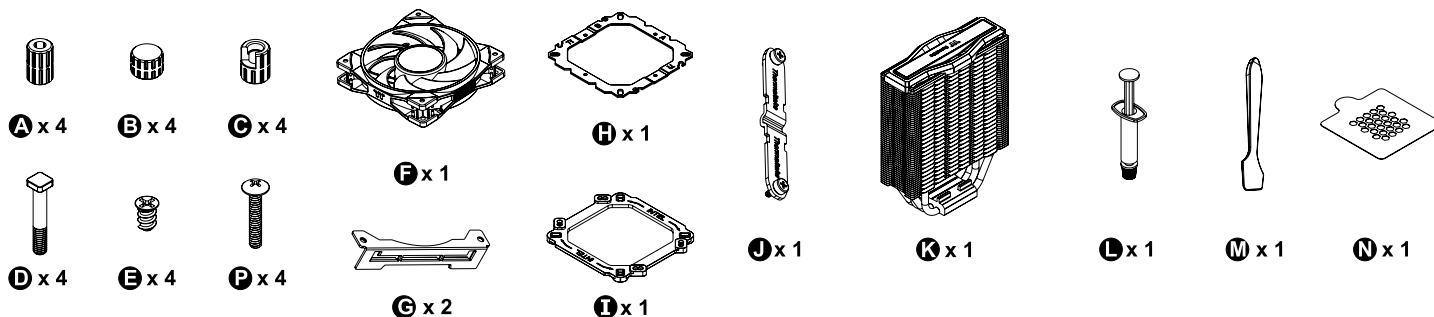

Parts List

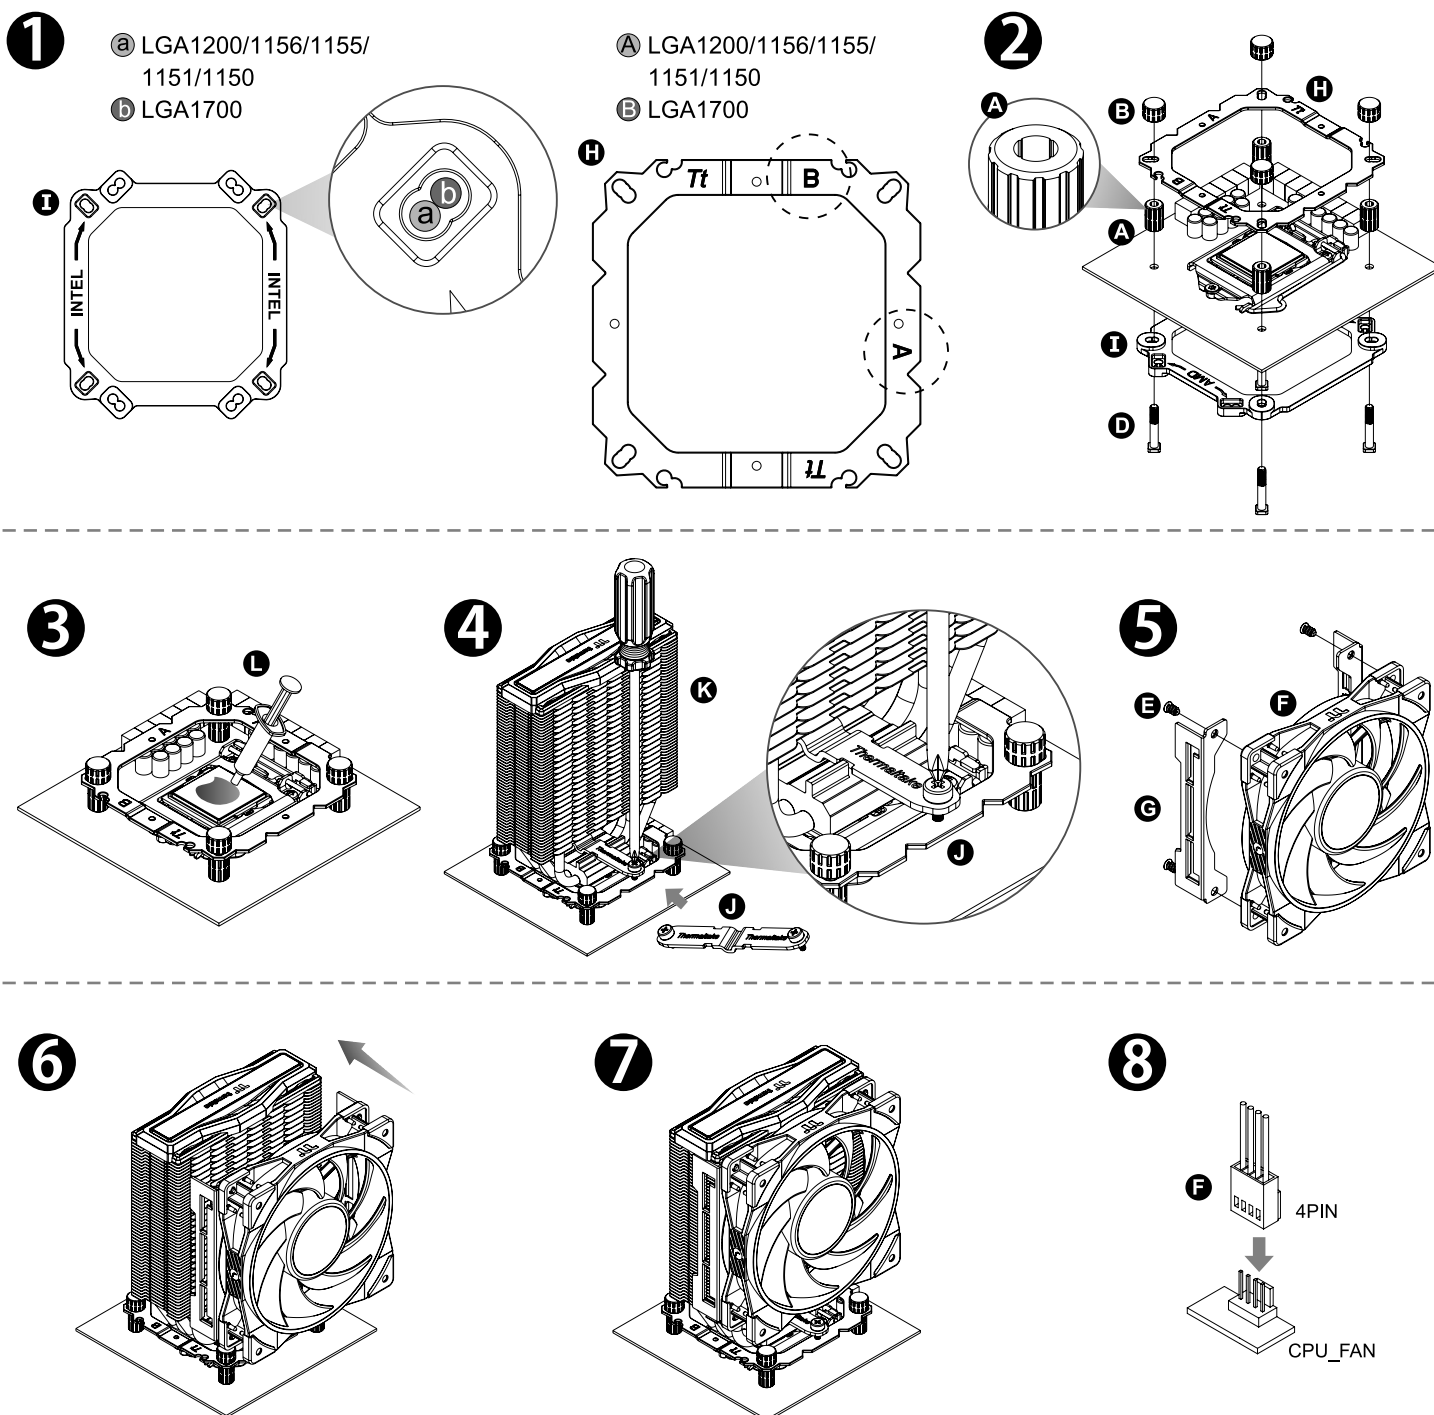

Intel Installation Guide




AMD Installation Guide

1

a AM3/AM2/FM2/FM1

b AM4


I

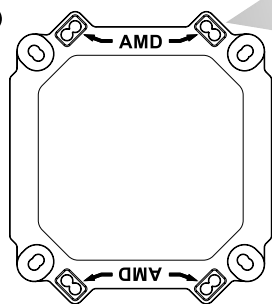

A AM5/AM4/AM3/AM2/FM2/FM1


B N/A

H

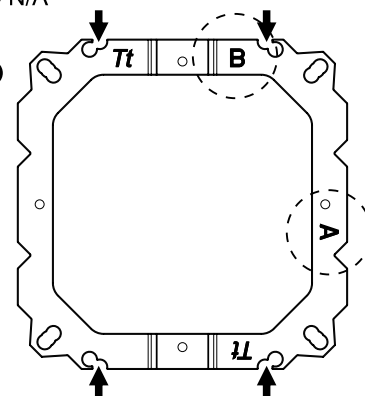


2


AM4/AM3/AM2/FM2/FM1

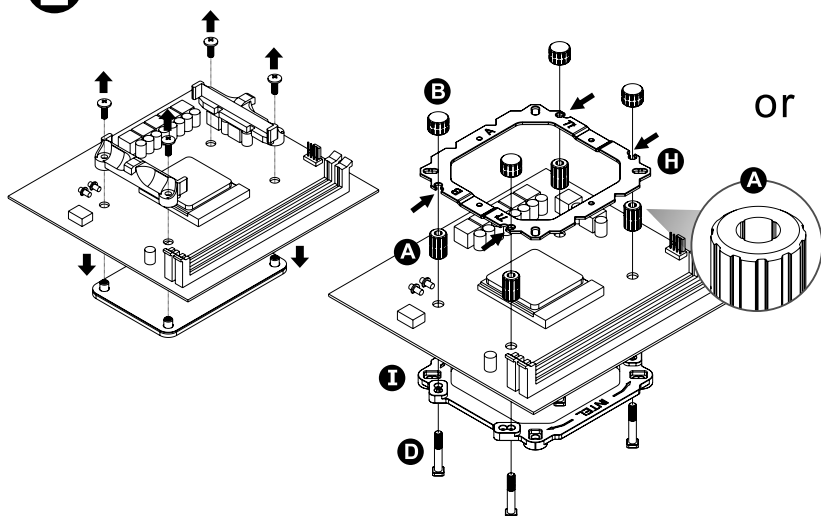


AM5

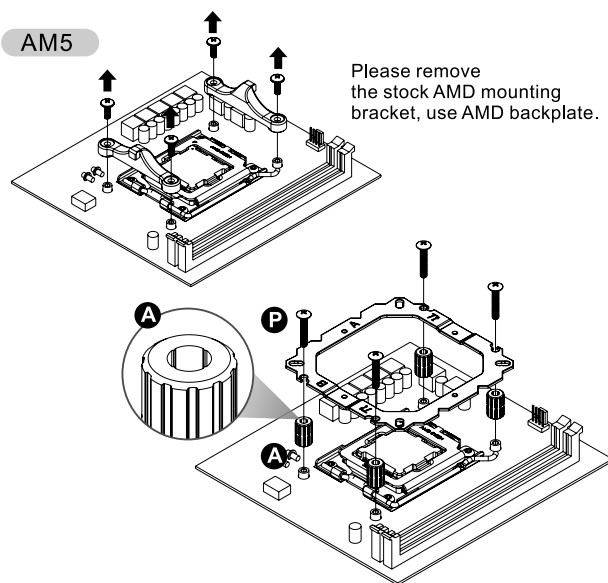


3

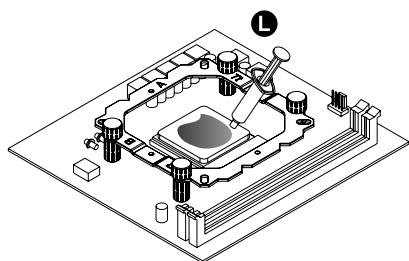


4

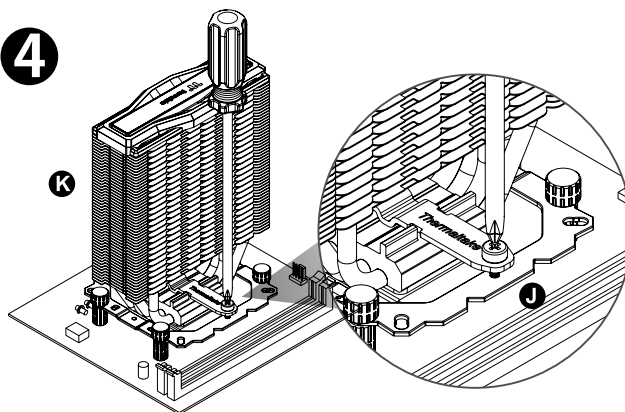


5

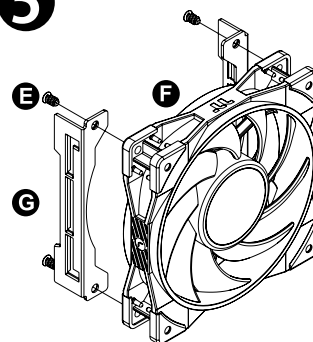

6

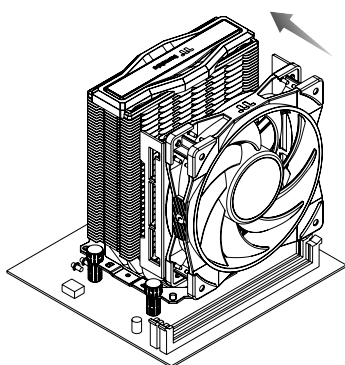

7

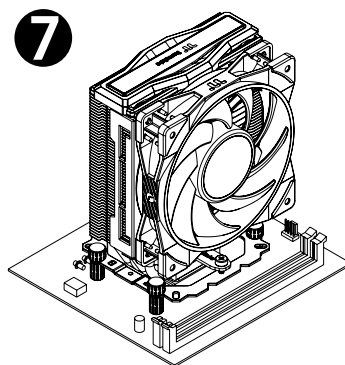

8

