



Parts List

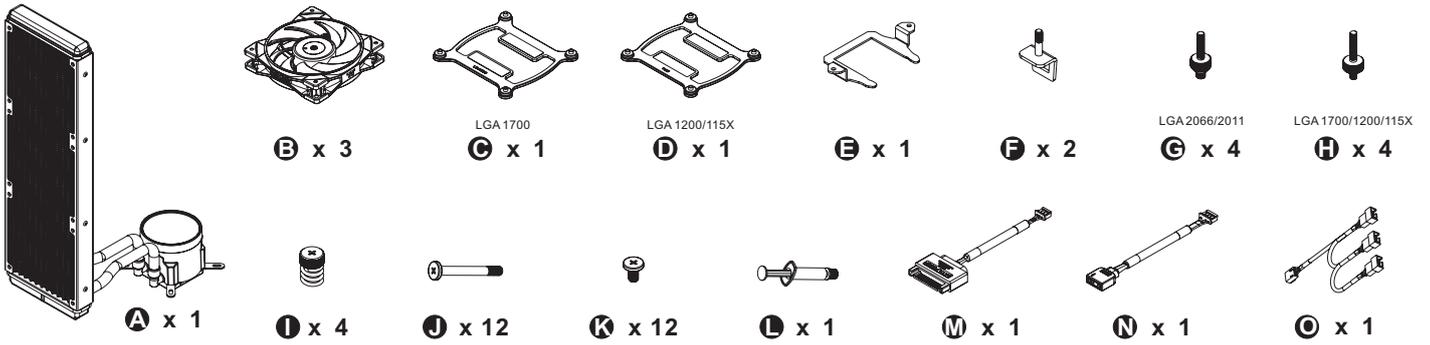


Intel Installation Guide

1

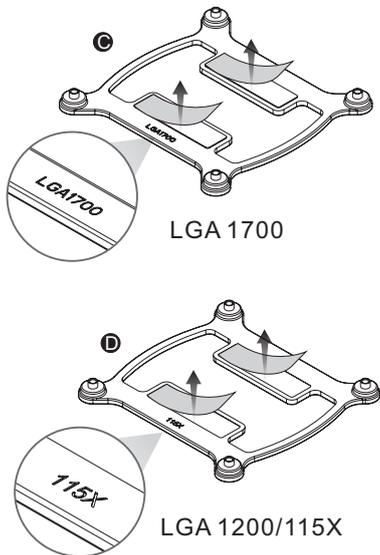


2

1700/1200/1156/1155/1151/1150

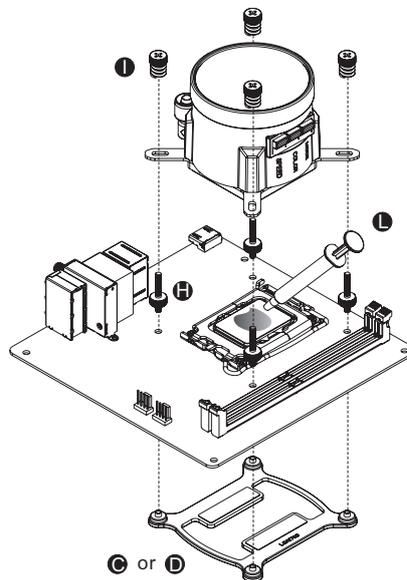


2066/2011-3/2011

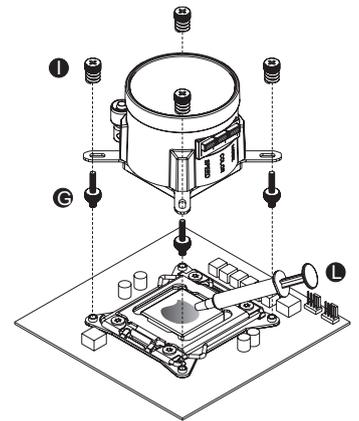


AMD Installation Guide

1

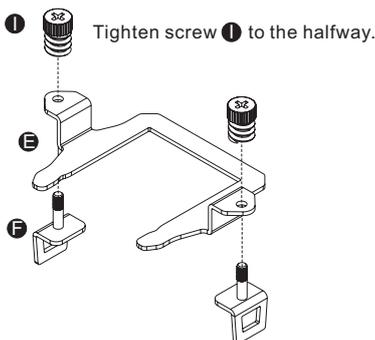


2

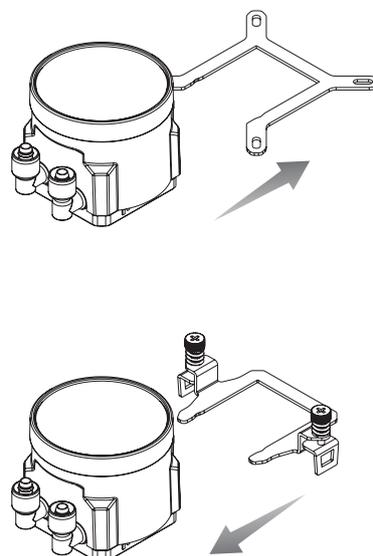


3

Tighten screw **I** again to ensure your waterblock is secure enough.

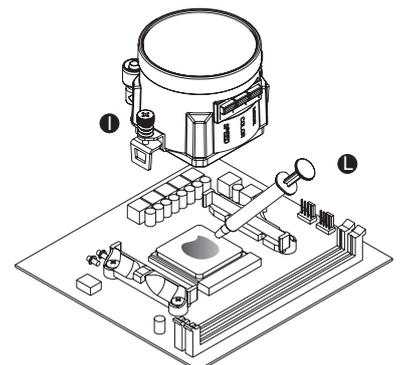


Installation Guide


1

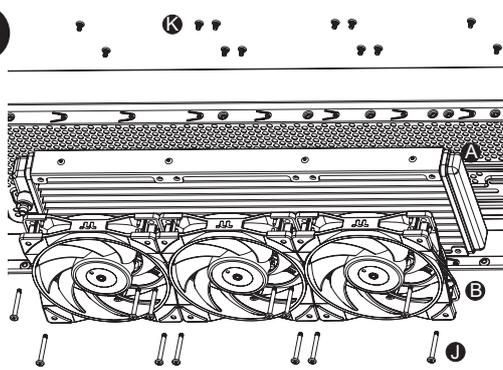


2

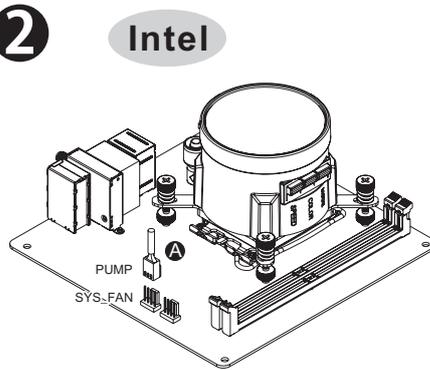

AMD

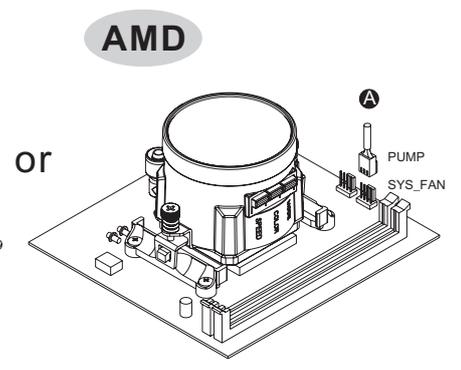


3

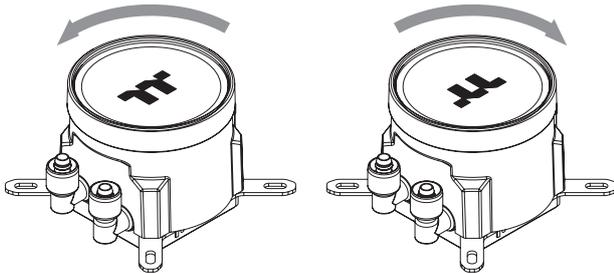

A rotatable LED cap built-in waterblock accommodates re-orienting the logo no matter the direction the cooler is installed

4

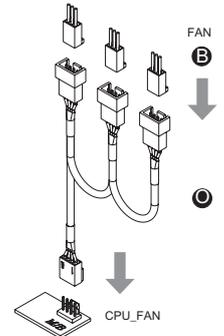


ARGB Controller Installation Guide


1

CAUTION


To use the ARGB Controller, please only connect Cable E to the water block

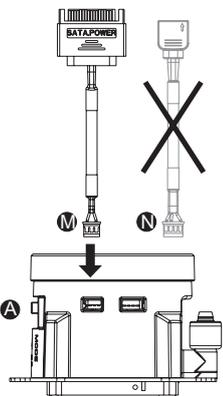

2

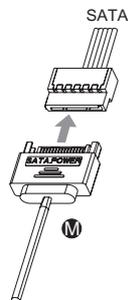

3

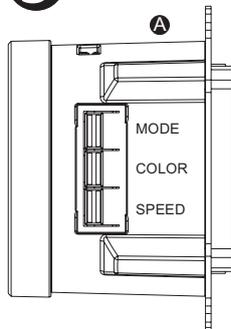

1. Light Mode:

Switch over between 7 LED modes.

Rainbow → Full light → RGB Spectrum → Off → Flow → Radar → Pulse → Blink

2. Color Mode:

When light mode is in Full Lighted, Pulse and Blink :

Switch over 8 LED colors .

Red → Yellow → Green → Teal → Blue → White → Purple → Rainbow

When light mode is in Ripple :

Switch over 7 LED colors .

Red → Yellow → Green → Teal → Blue → White → Purple

When light mode is in RGB Spectrum:

Click to memorize and lock the color you want, click again to unlock the 256 colors auto rotation.

When light mode is in Wave and Flow :

LED color can not be adjusted.

3. Light Speed:

Switch over between 4 light modes.


Slow → Normal → Fast → Extreme

MB SYNC Installation Guide

CAUTION

- To use Motherboard RGB Software, please only connect Cable F to the water block
- Please power off the PC and check the Positive and Negative ends on the connector before connecting the cable to the mainboard. Connecting the wrong end can damage the product.

1

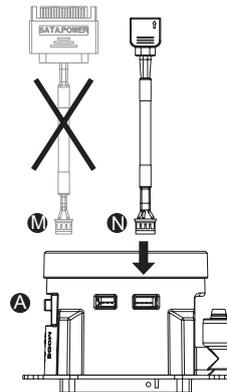

2

