



## Parts List

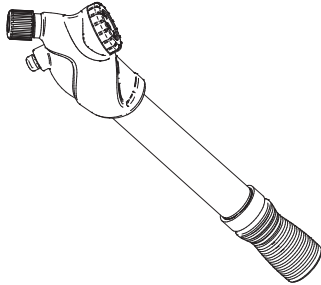

**A** x 1

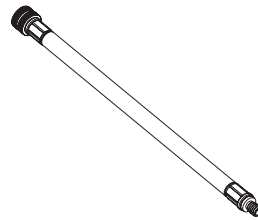

**B** x 1




**C** x 1

## Intel Installation Guide

### Pressure Range

The table defines the safe pressure range on Pacific Leak Tester gauge for Pacific series products

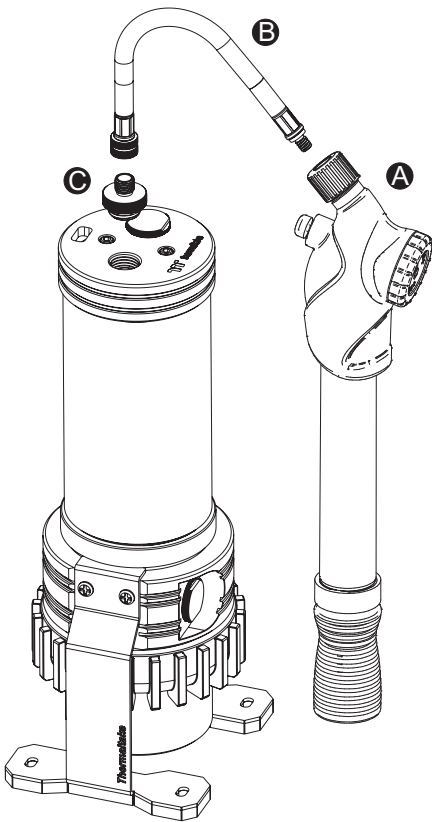

| Product         | Pressure Range |
|-----------------|----------------|
| CPU Water Block | 0.5 ~ 1.0 bar  |
| VGA Water Block | 0.5 ~ 0.6 bar  |
| Reservoir       | 0.5 ~ 0.6 bar  |
| Radiator        | 0.5 ~ 1.0 bar  |
| Distro plate    | 0.5 ~ 0.6 bar  |
| Loop            | 0.5 ~ 0.6 bar  |

### CAUTION

The minimum testing time is 5 minutes.  
Check the gauge for pressure drop,  
make sure pressure does not less than 0.5 bar.