




Parts List

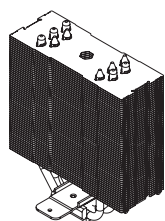


A x 1

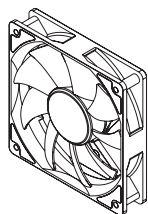

 
B x 1



C x 4

 

D x 1

 

E x 1



F x 4



G x 4



H x 4



I x 4



 
J x 2



K x 2



L x 4



M x 1

Intel Installation Guide



Intel LGA1366/1700/1200/115X

a LGA1366


b LGA1700

c LGA1200/1156/1155/1151/1150

1

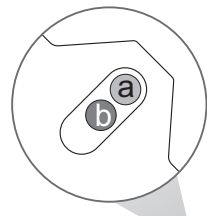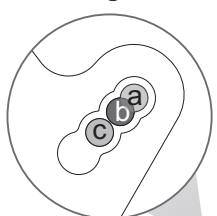

2


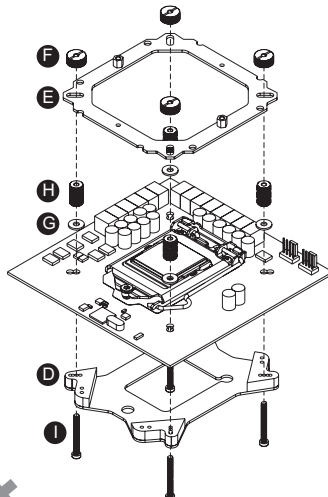


Intel LGA2066, LGA2011-3, LGA2011


1

LGA2066/2011-3/2011


2

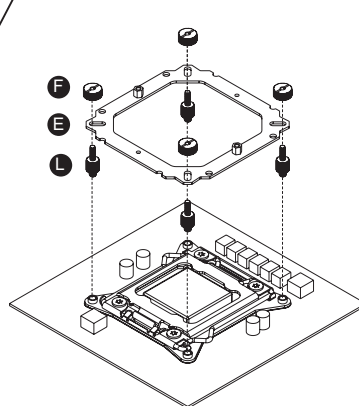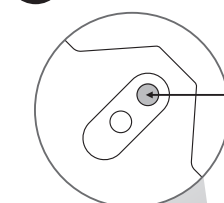


3

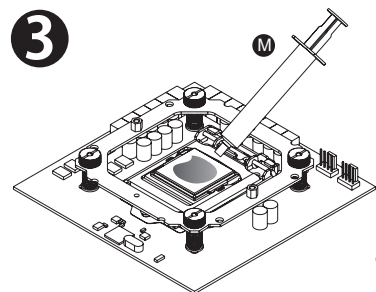


4

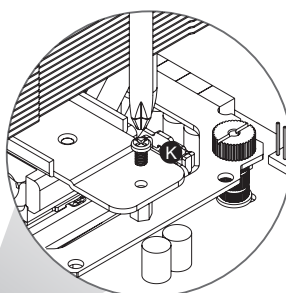

5

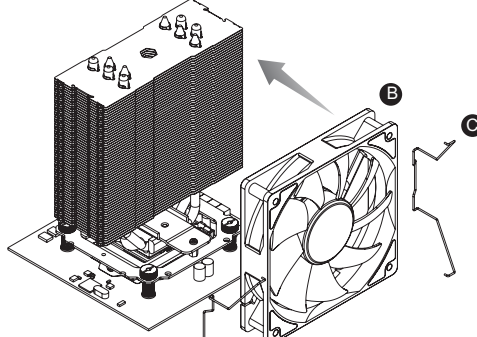


6



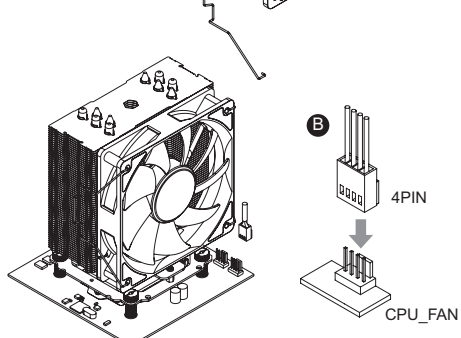


AMD Installation Guide

AMD AM4

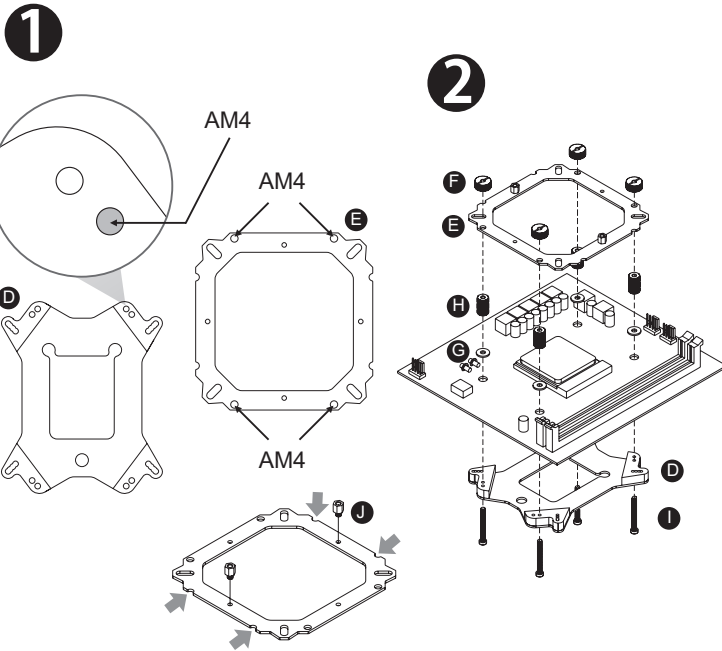

AMD AM3/AM2/FM2/FM1

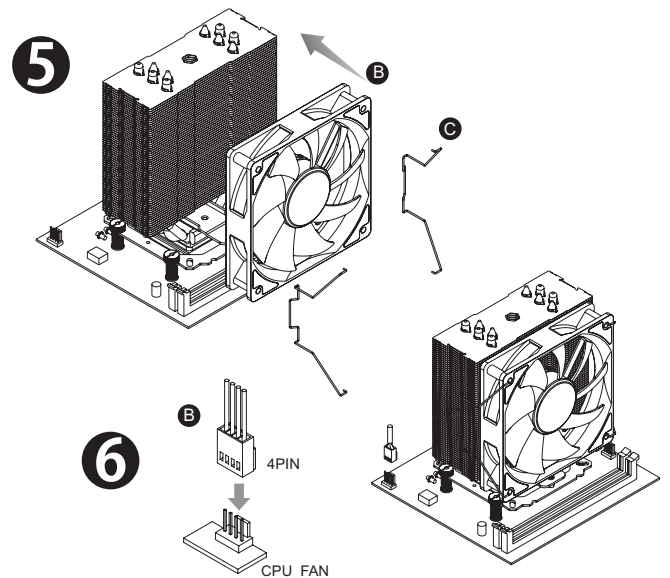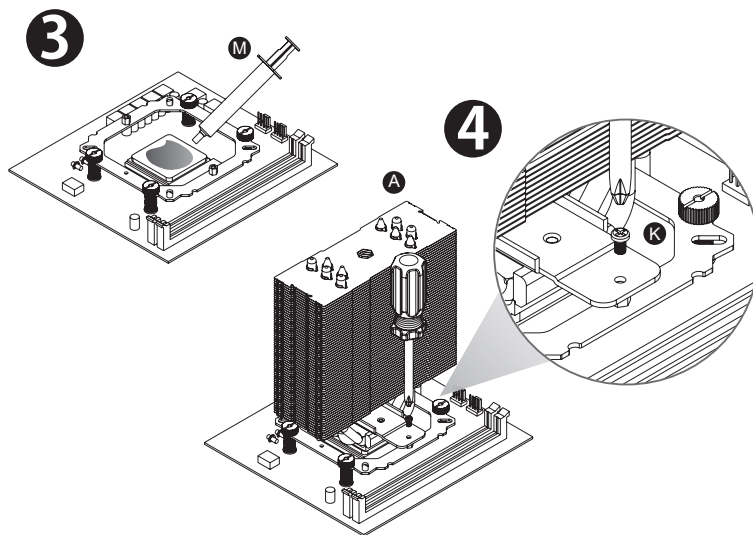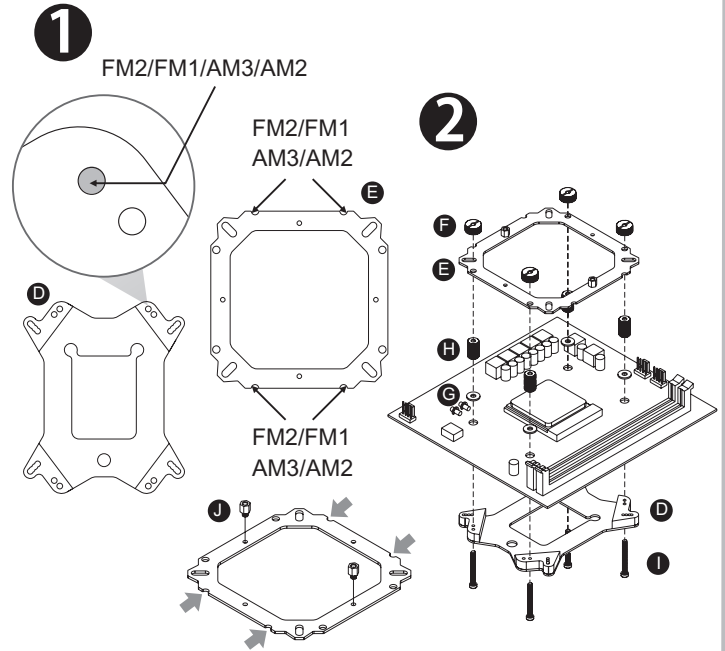

MB SYNC Installation Guide

CAUTION

Please power off the PC and check the Positive and Negative ends on the connector before connecting the cable to mainboard. Connecting the wrong end can damage the fans.

