

SETTING UP THE iTAKE ENGINE WITH RAZER SYNAPSE

Thermaltake iTake engine supports Razer Chroma effects. It provides a full-blown immersive gaming experience and transforms the way you play as you enjoy ambient in-game effects that react dynamically to every action and event.

Step 1: Make sure your Razer devices support Razer Chroma


Make sure your product has a **Chroma** logo on the website as shown in the picture below.




*Please refer to the [Razer Chroma website](#) for more details.



Step 2: Open “Razer Synapse” and Enable “iTake” Connection

Click “CONNECT”>>”DEVICES” and enable the “Thermaltake” label.


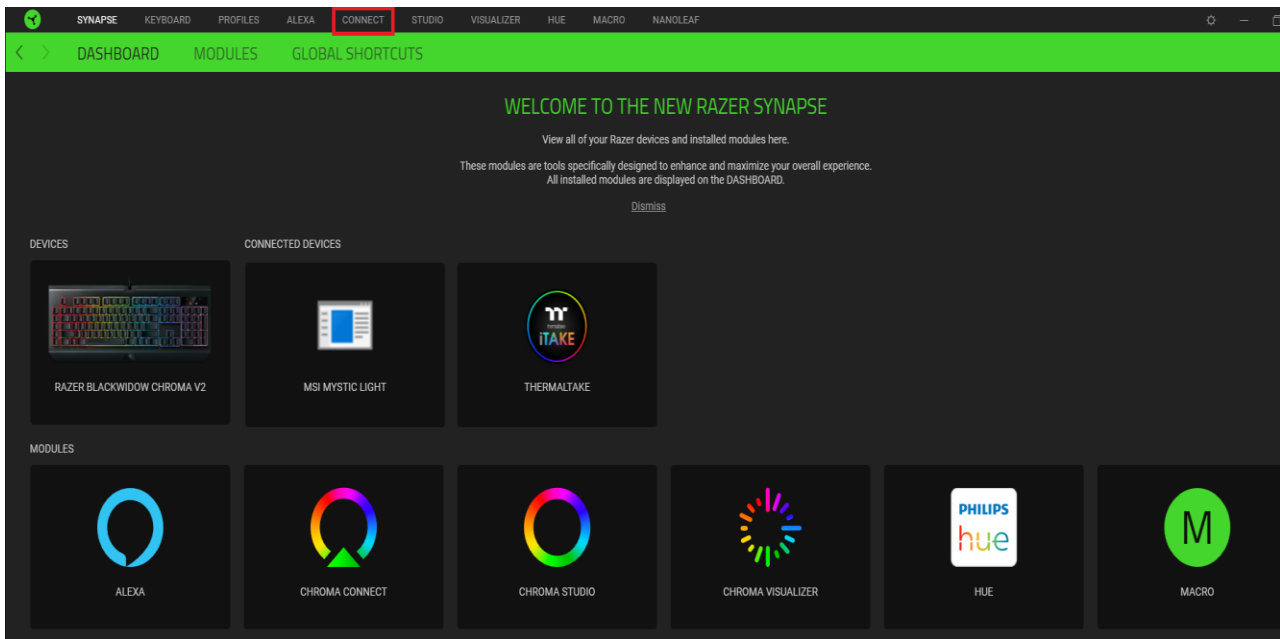


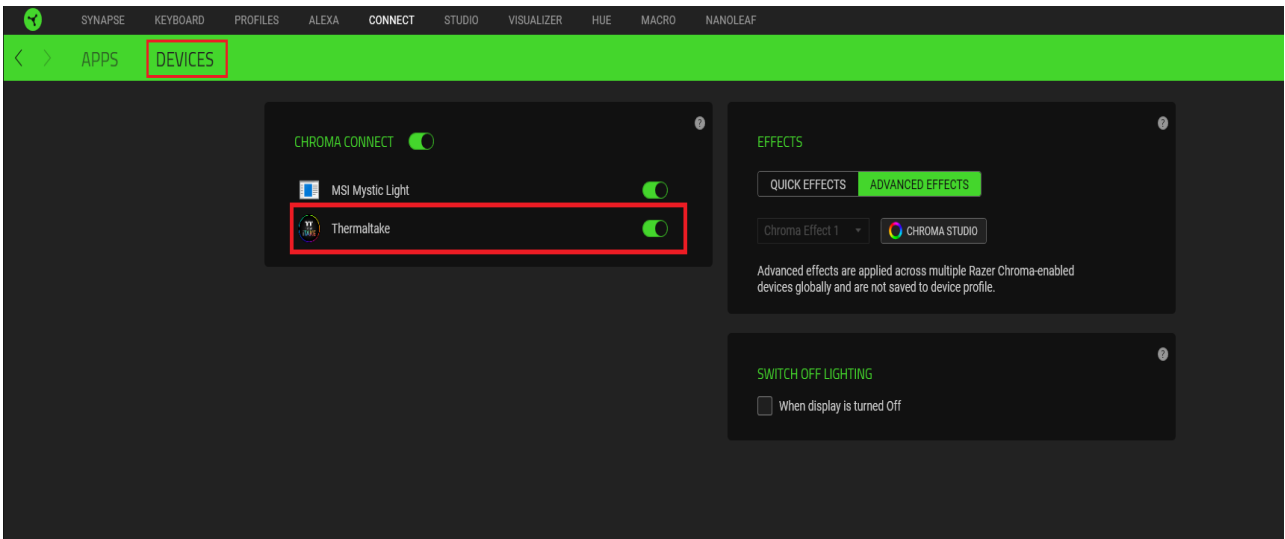

Step 3: Set Your Lighting Effects: Choose a lighting effect.

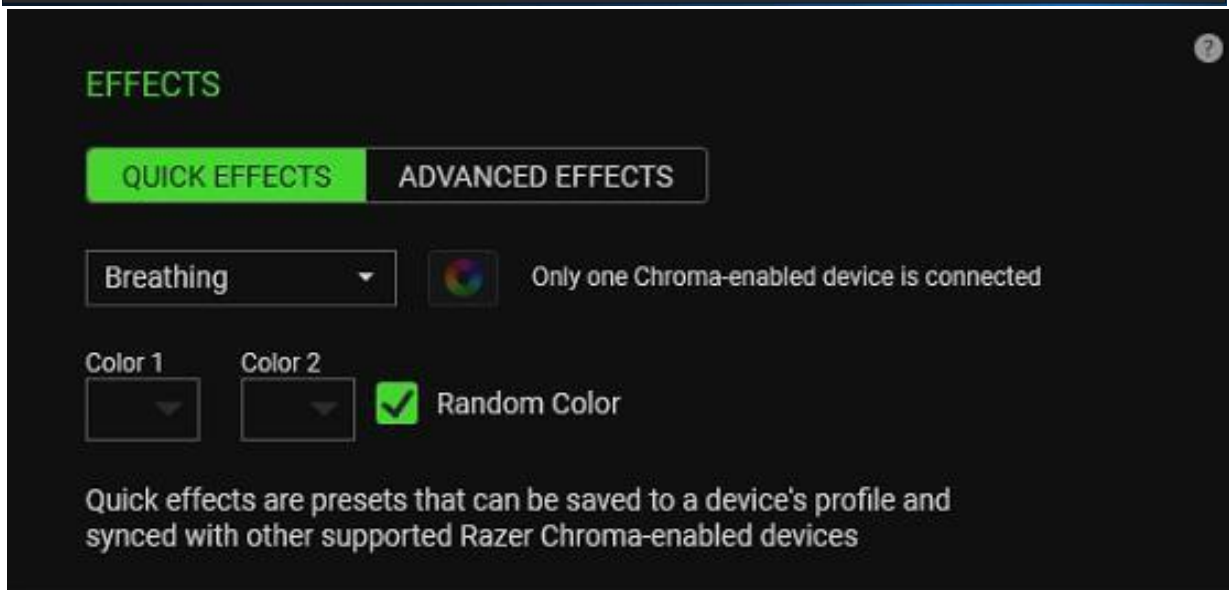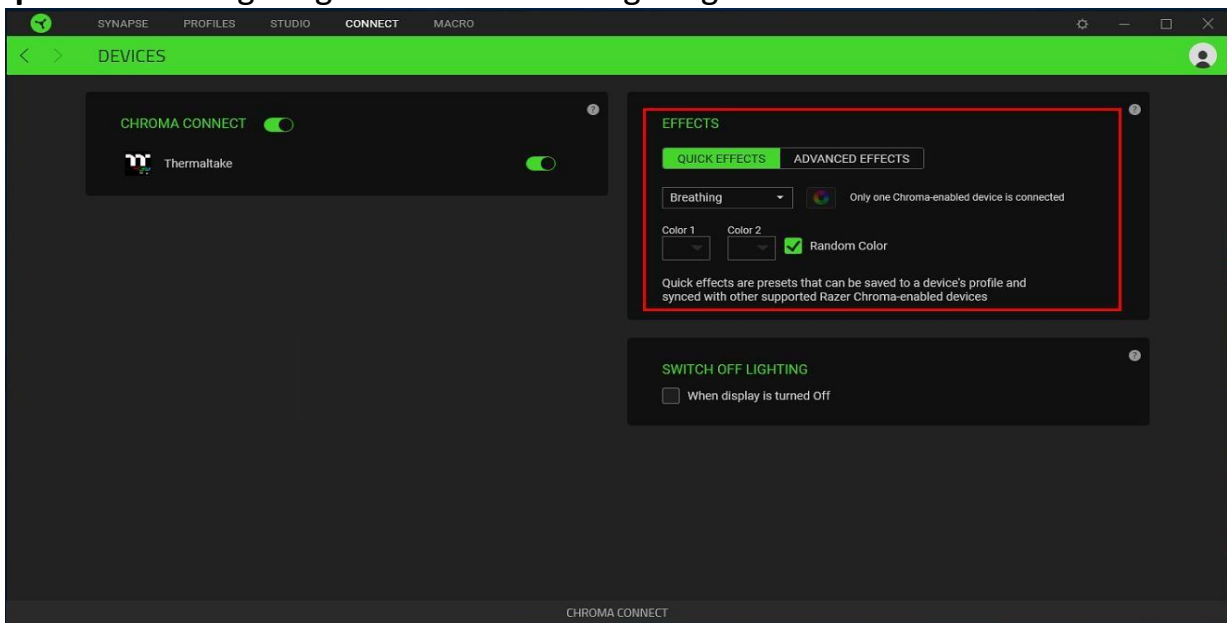

You can also customize lighting effects yourself.

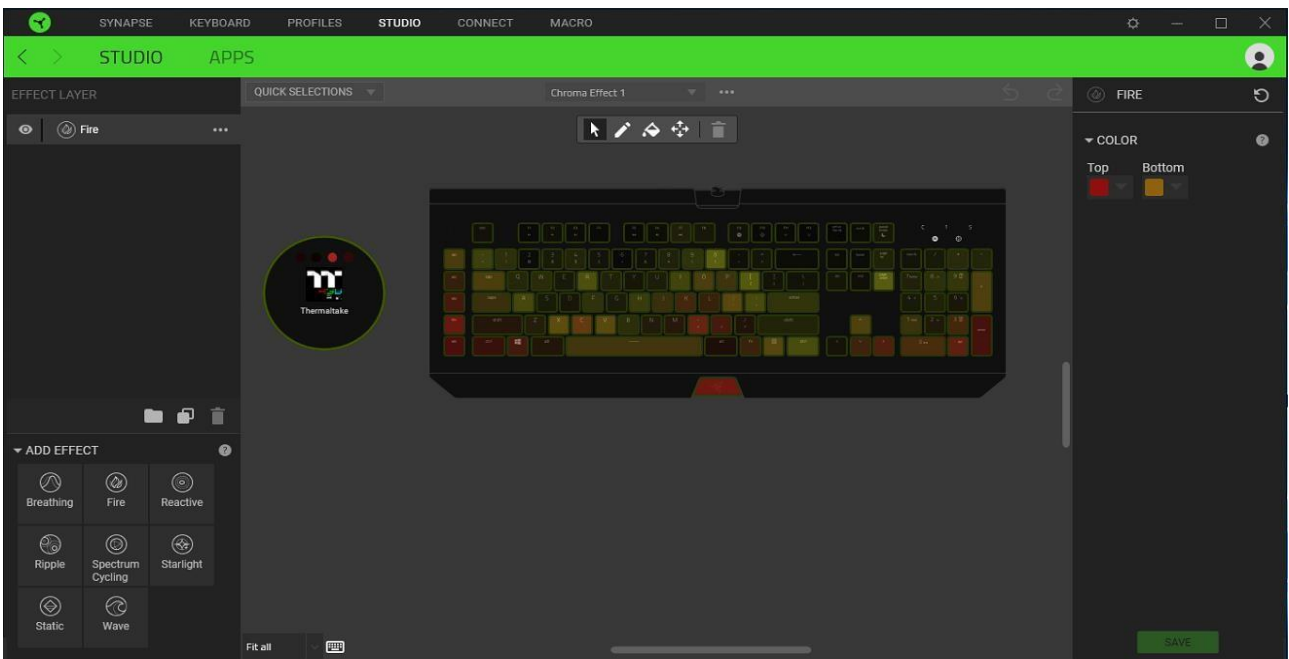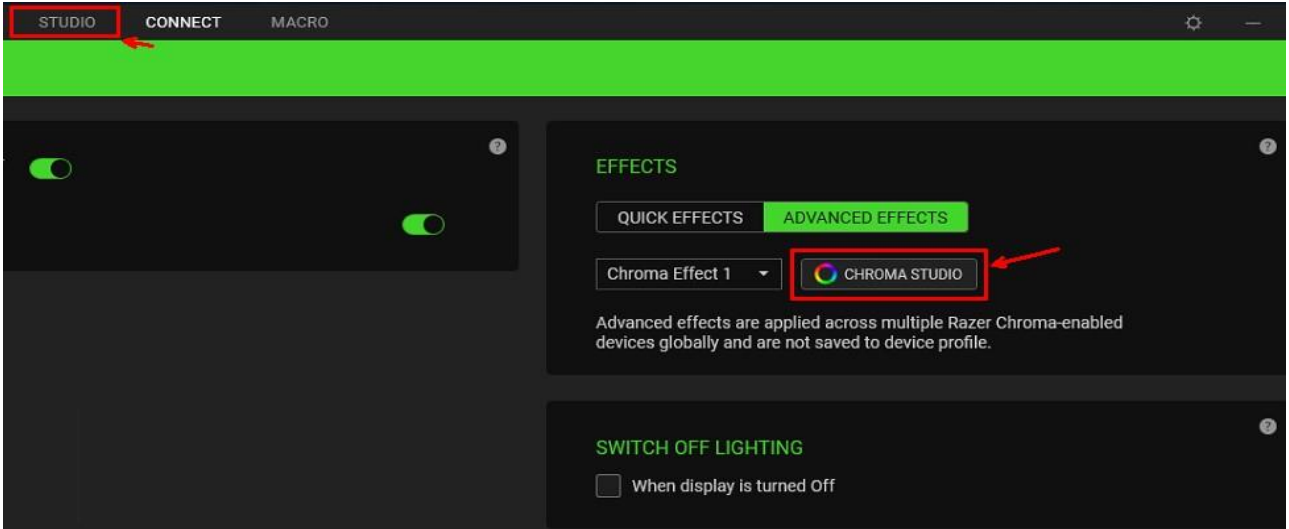

Step 4: Sync iTake engine with Razer Chroma Effects
Click “setting”, then enable “RAZER CHROMA”

