


AI Forge

Now only supports the MAGFloE Ultra AIO.


Download the TT RGB PLUS 3.0.3 from the Thermaltake website

<https://www.thermaltake.com/downloads>


- Select the **LCD MONITOR** page.

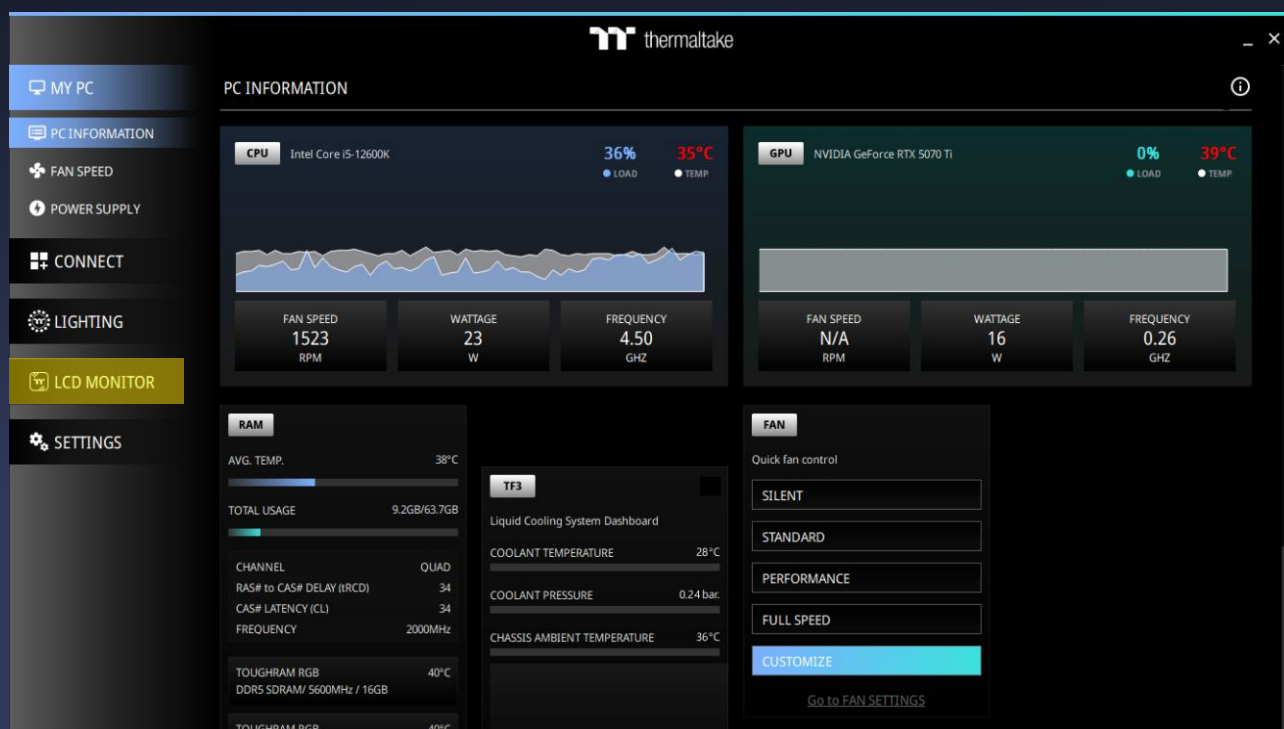


- Click to enter the **MAGFloer Ultra** LCD product page.

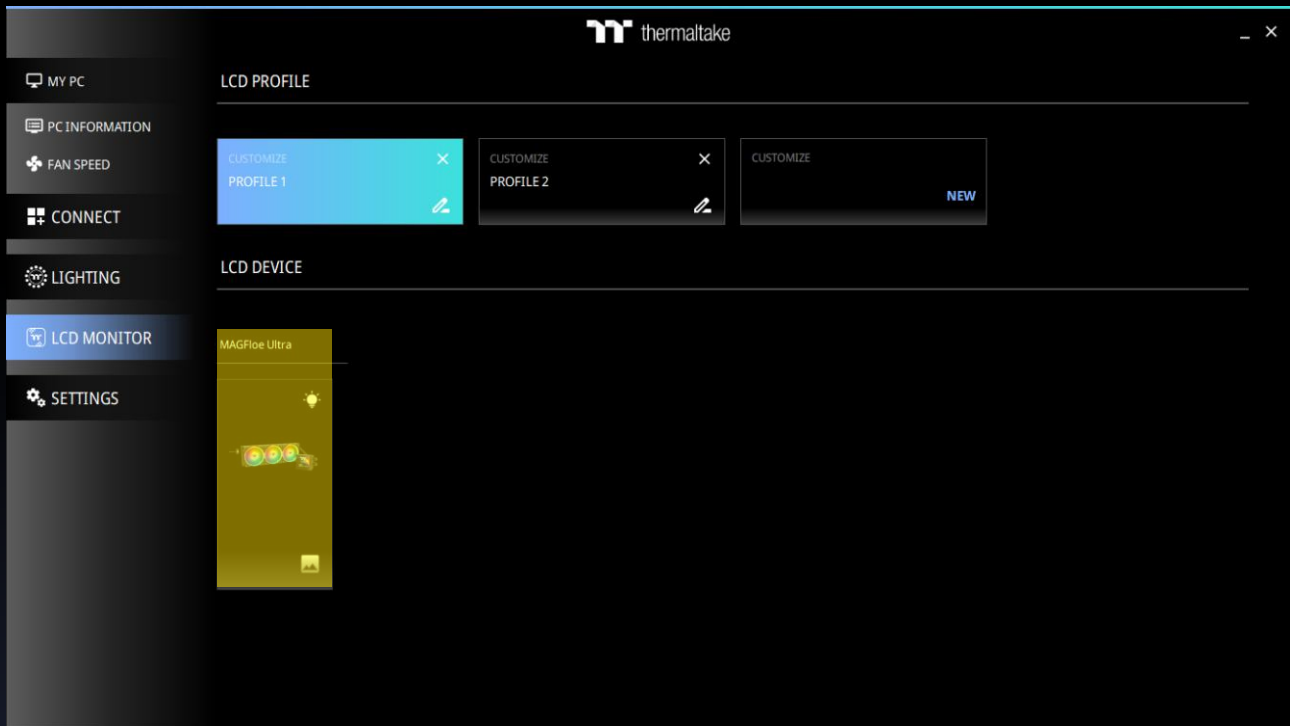


- Navigate to **LCD THEME**, then click **AI Forge** to access the AI image generation function.

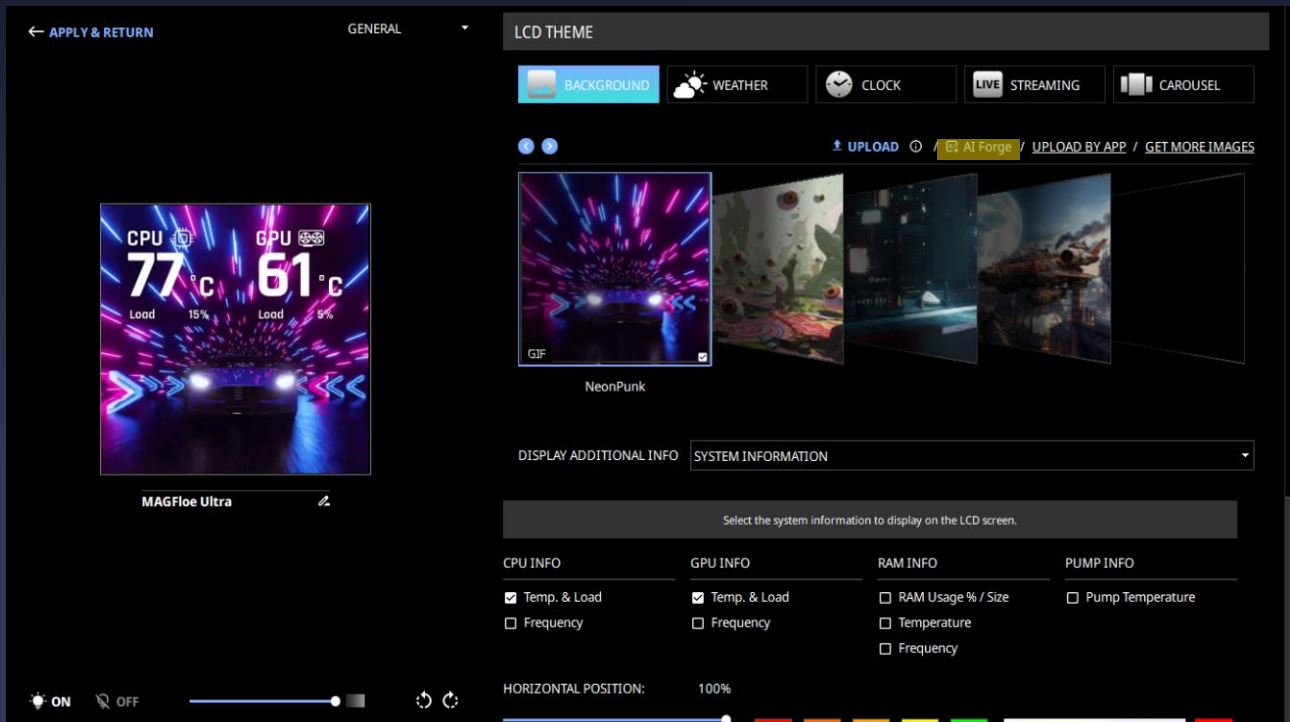


- First-time use of this function. Please navigate to the SETTINGS page and enter the OpenAI API key.

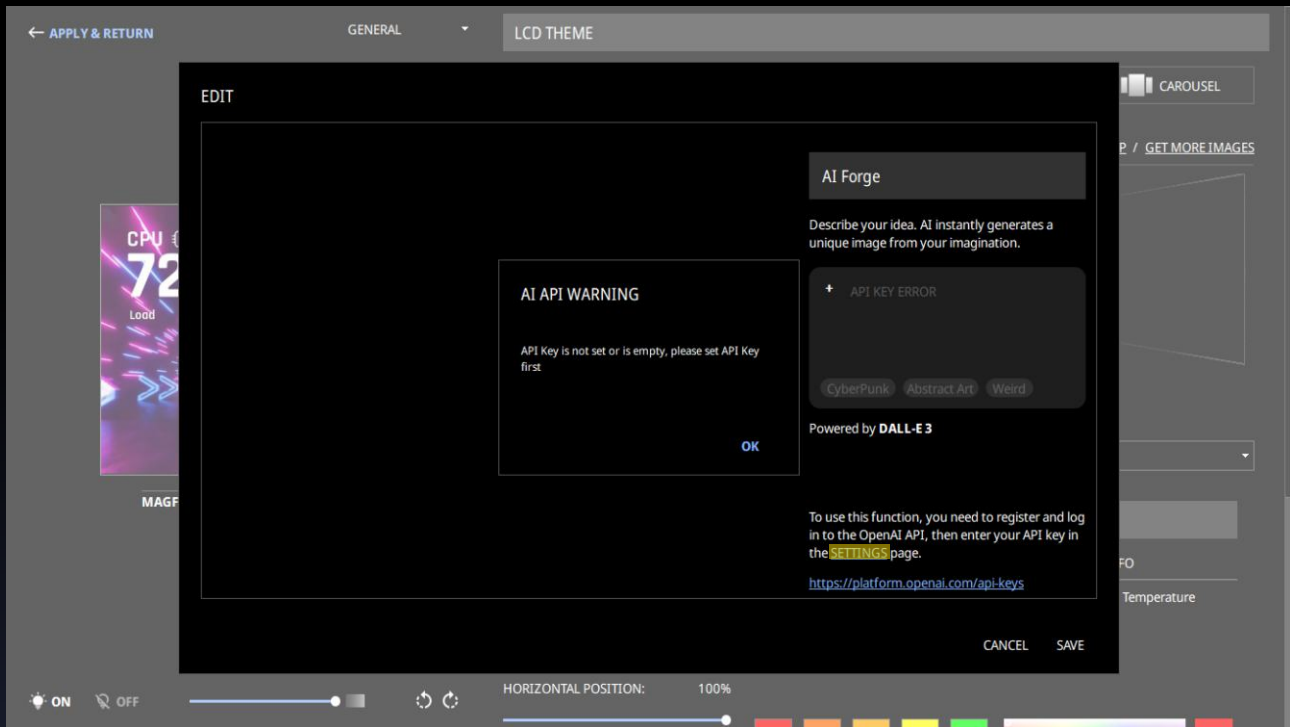


- Obtain the OpenAI API Key. <https://platform.openai.com/api-keys>
Click **Create new secret key** button to create a key.

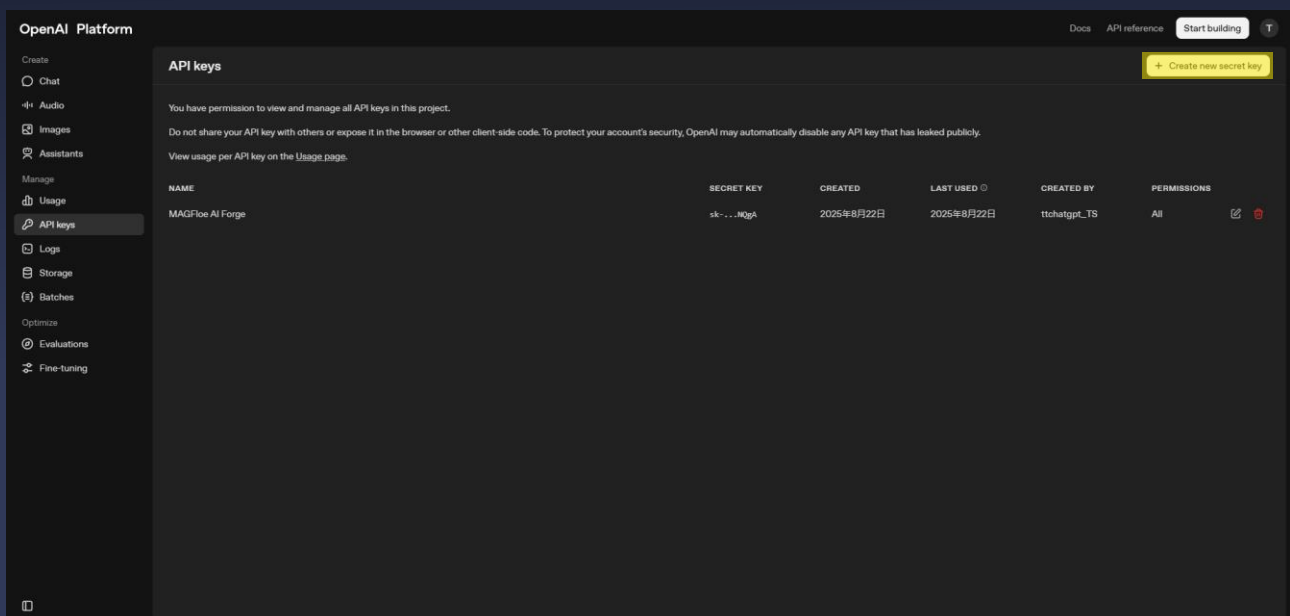


- Create a new secret key.

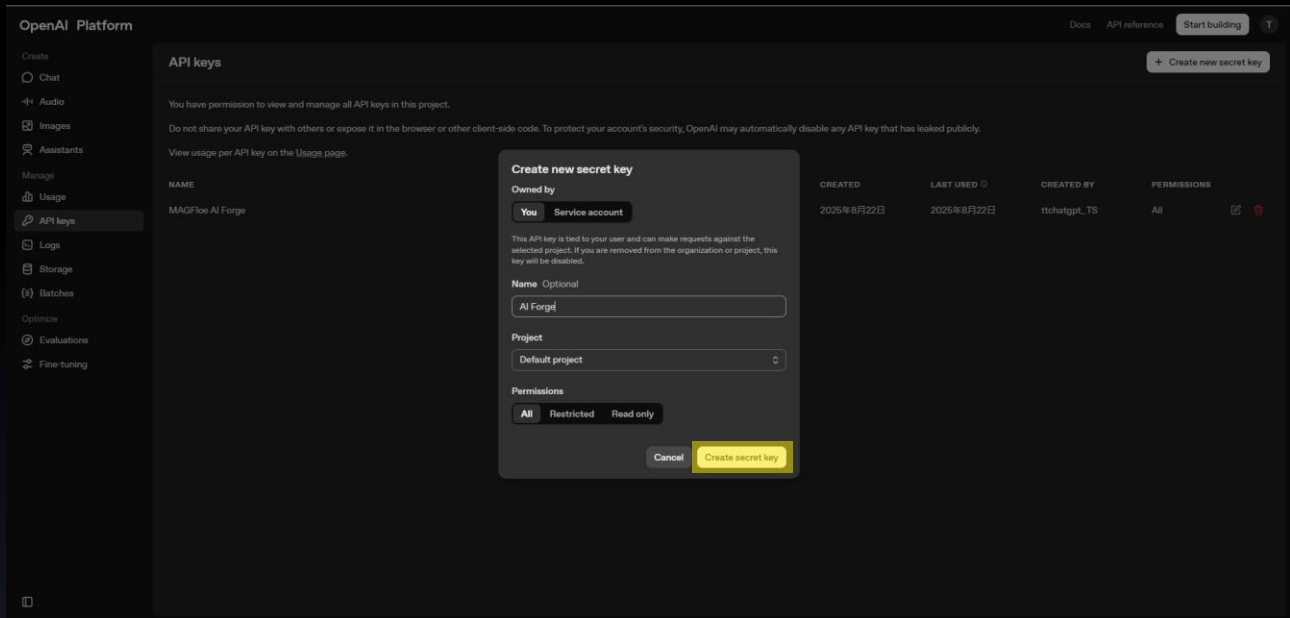


- Click to copy the API key.

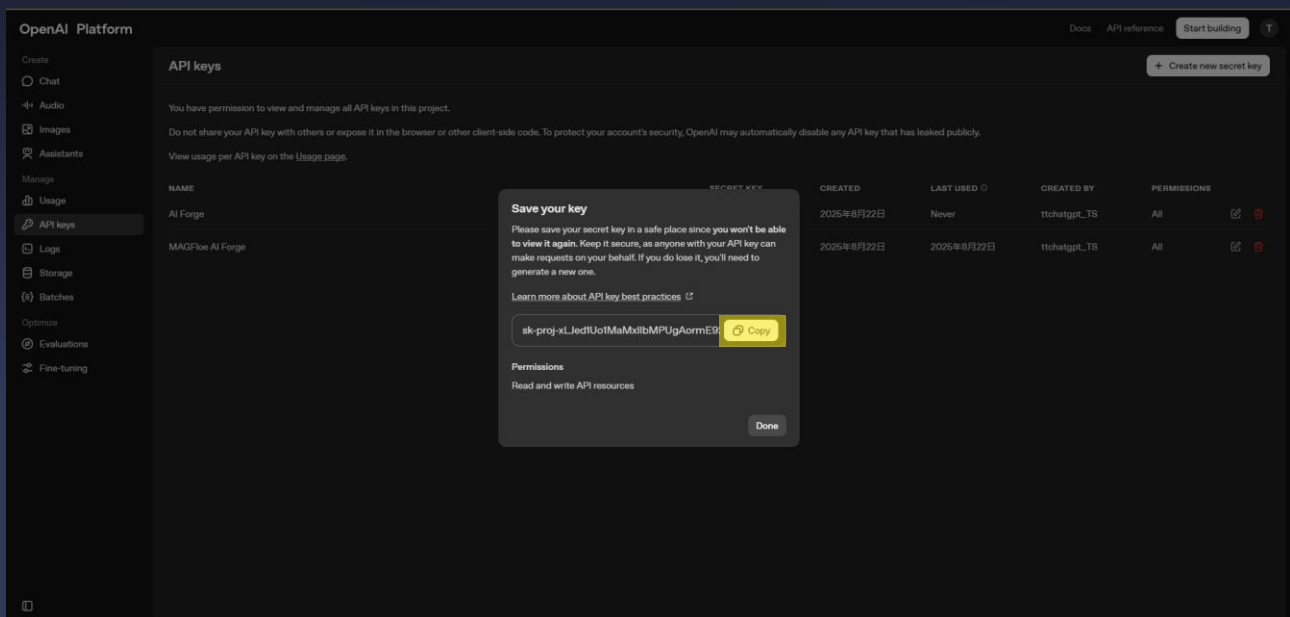


- Input the API key on the **SETTINGS** page.

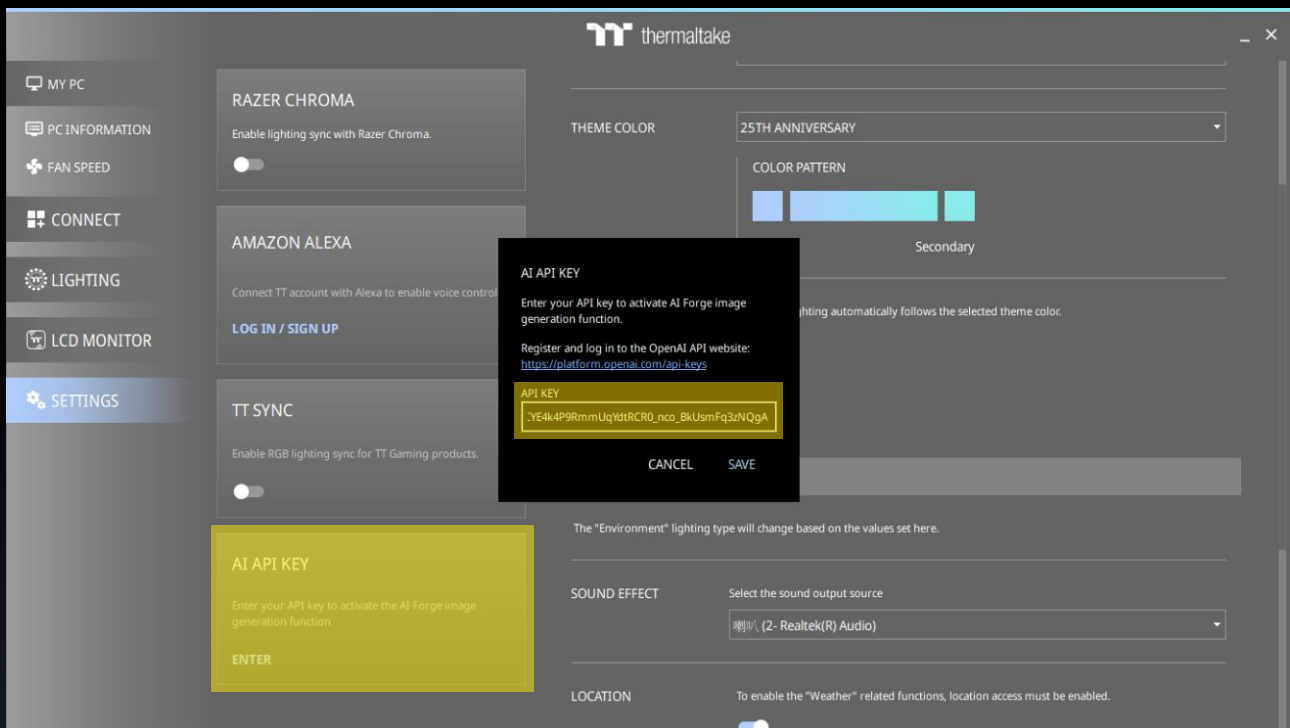

- The AI image generation function in AI Forge requires linking a credit card for payment before use. Click **Add payment details** to bind a credit card.
<https://platform.openai.com/settings/organization/billing/overview>

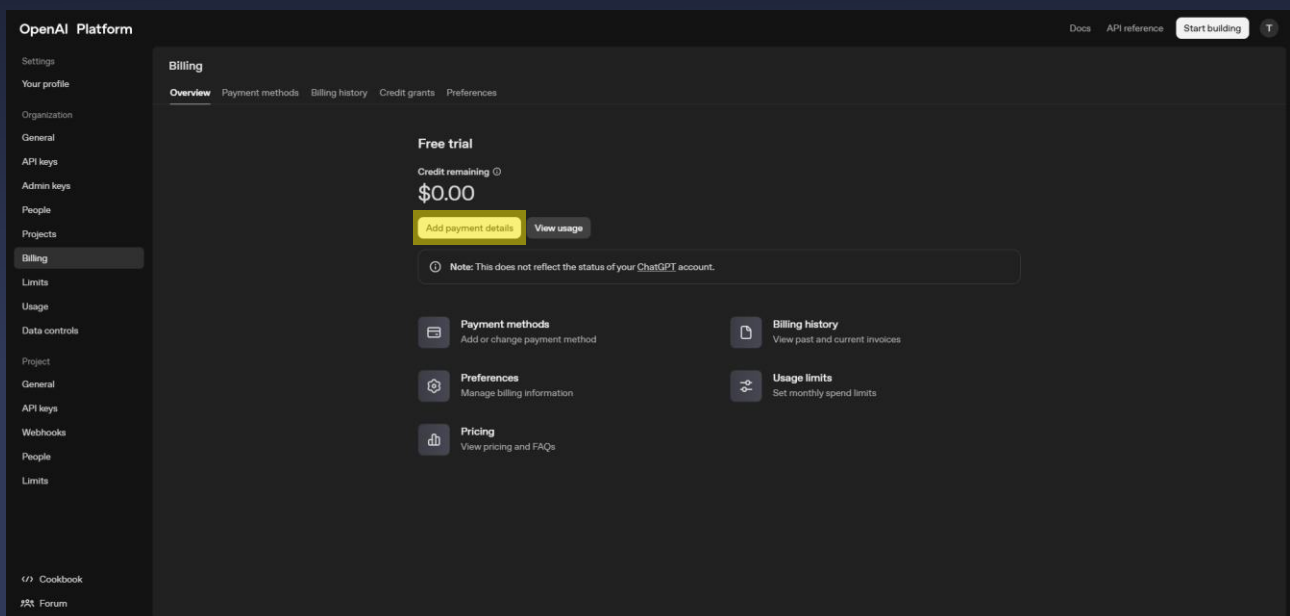

- Now, users can enter prompts in the **AI Forge** image generation function to create images.

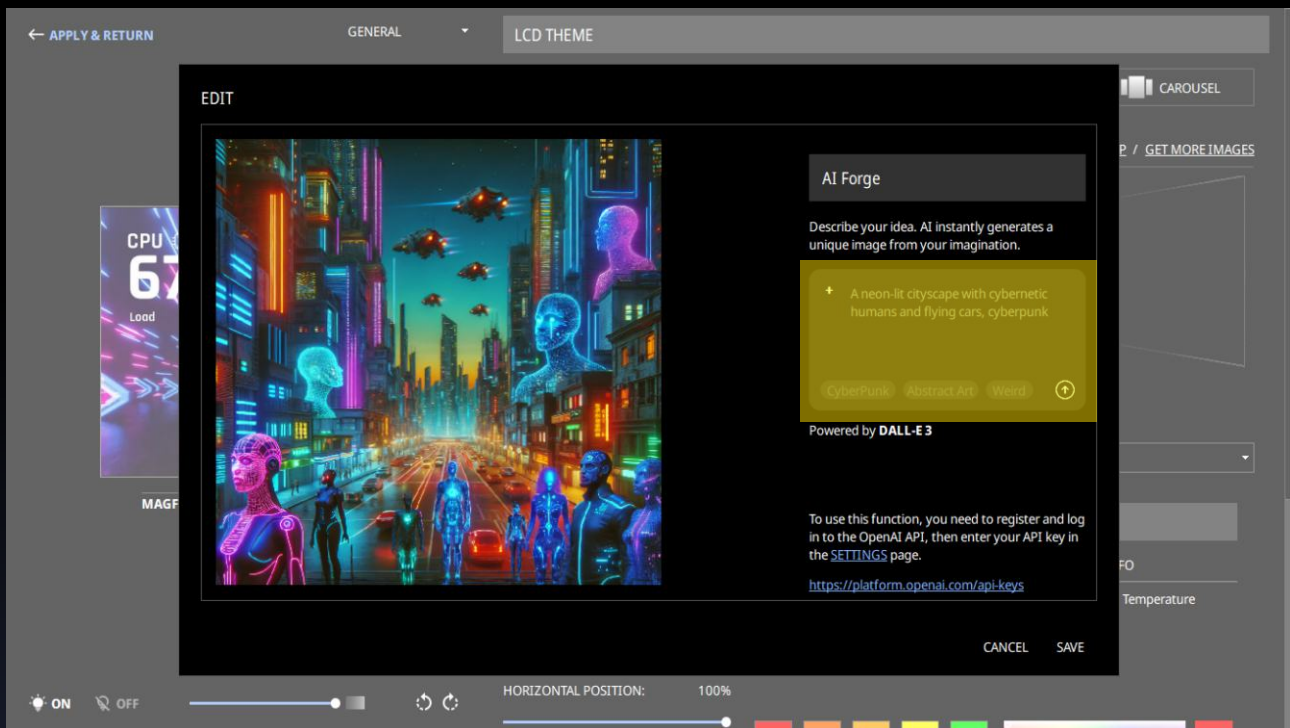

- The generated images via **AI Forge** will show in the **BACKGROUND** after being saved.

