

# AI Forge

## Support Product:

- MAGFløe Ultra ARGB
- MAGCurve Ultra ARGB
- 6" LCD Screen Kit
- TH V3 Ultra ARGB



Download the latest version of TT RGB PLUS from the Thermaltake website  
<https://www.thermaltake.com/downloads>

● Select the **LCD MONITOR** page.


The screenshot displays the Thermaltake AI Forge software interface. The left sidebar contains navigation options: MY PC, PC INFORMATION (selected), FAN SPEED, POWER SUPPLY, CONNECT, LIGHTING, LCD MONITOR (highlighted in yellow), and SETTINGS. The main content area is titled 'PC INFORMATION' and features several data panels:

- CPU:** Intel Core i5-12600K, 36% Load, 35°C Temp. Includes a usage graph and metrics: Fan Speed 1523 RPM, Wattage 23 W, Frequency 4.50 GHz.
- GPU:** NVIDIA GeForce RTX 5070 Ti, 0% Load, 39°C Temp. Includes a usage graph and metrics: Fan Speed N/A RPM, Wattage 16 W, Frequency 0.26 GHz.
- RAM:** AVG. TEMP. 38°C, TOTAL USAGE 9.2GB/63.7GB, CHANNEL QUAD, RAS# to CAS# DELAY (tRCD) 34, CAS# LATENCY (CL) 34, FREQUENCY 2000MHz, TOUGHDRAM RGB 40°C, DDR5 SDRAM / 5600MHz / 16GB, TOUGHDRAM RGB 40°C.
- TF3:** Liquid Cooling System Dashboard, COOLANT TEMPERATURE 28°C, COOLANT PRESSURE 0.24 bar, CHASSIS AMBIENT TEMPERATURE 36°C.
- FAN:** Quick fan control with buttons for SILENT, STANDARD, PERFORMANCE, FULL SPEED, and CUSTOMIZE (highlighted in blue). Includes a 'Go to FAN SETTINGS' link.


● Click to enter the LCD product.

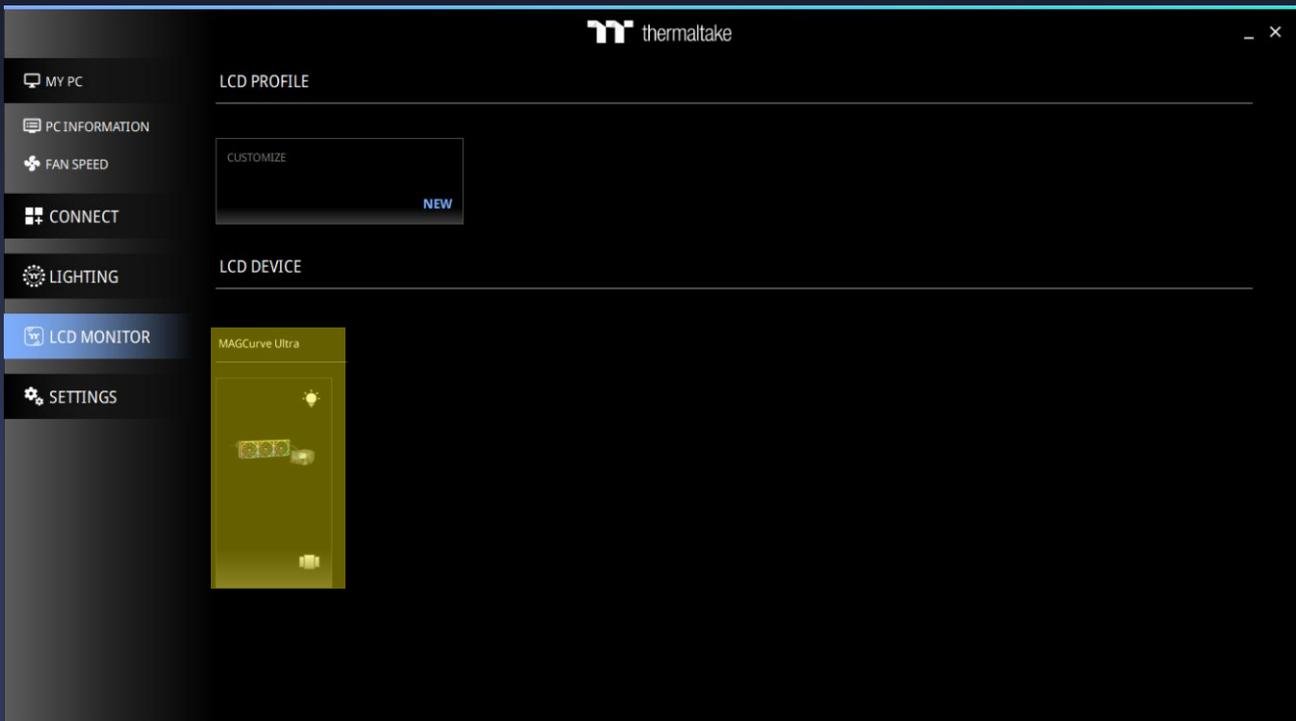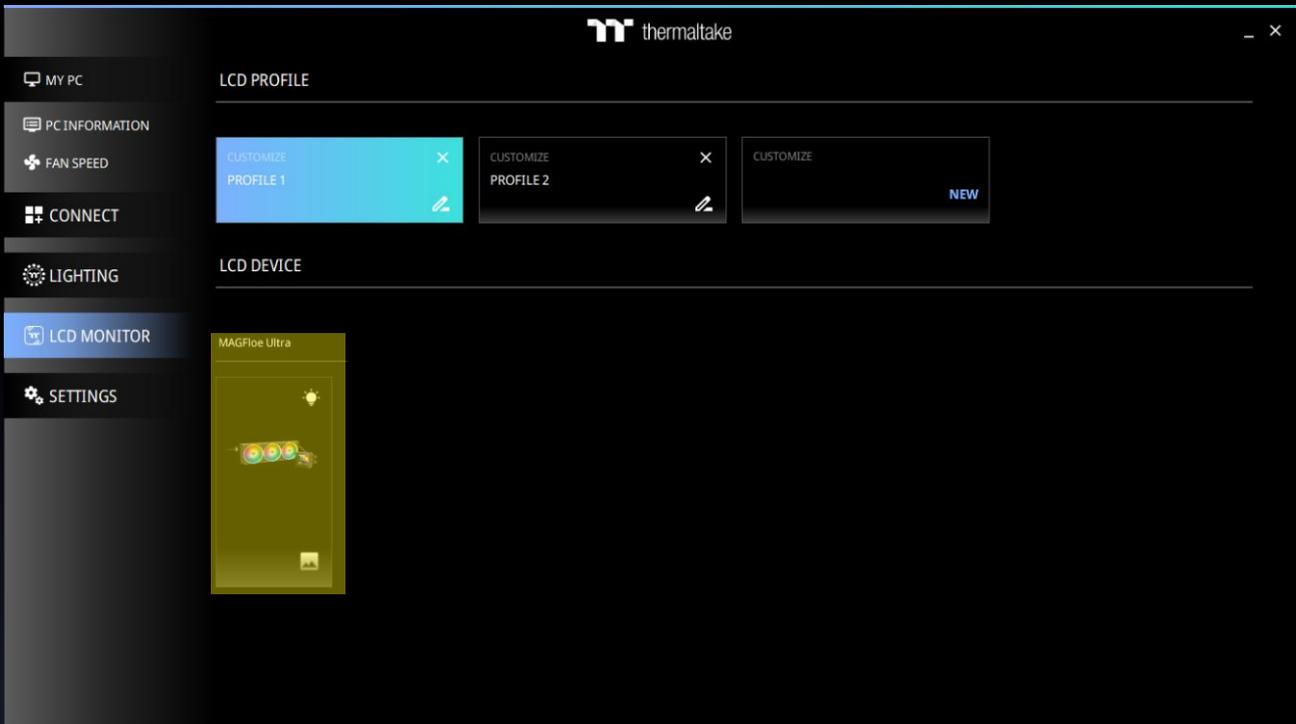


- Navigate to **LCD THEME**, then click **AI Forge** to access the AI image generation function.

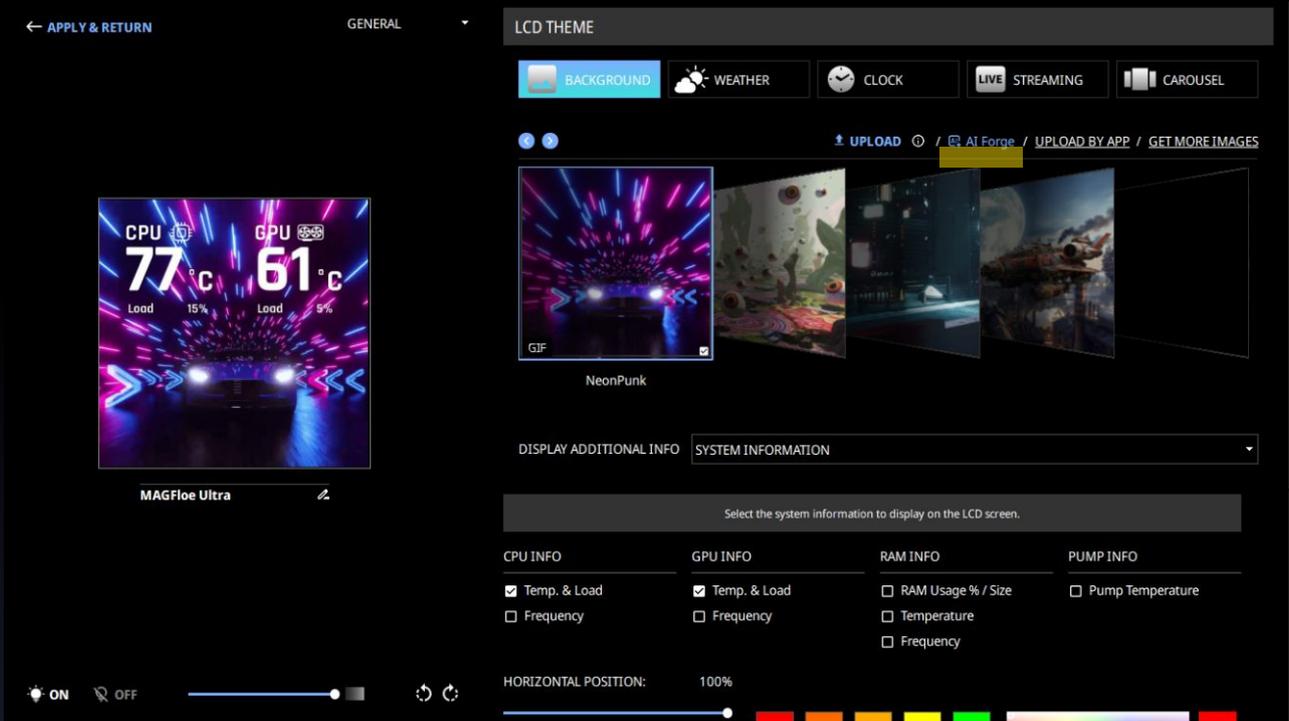


- First-time use of this function. Please navigate to the **SETTINGS** page and enter the OpenAI API key.

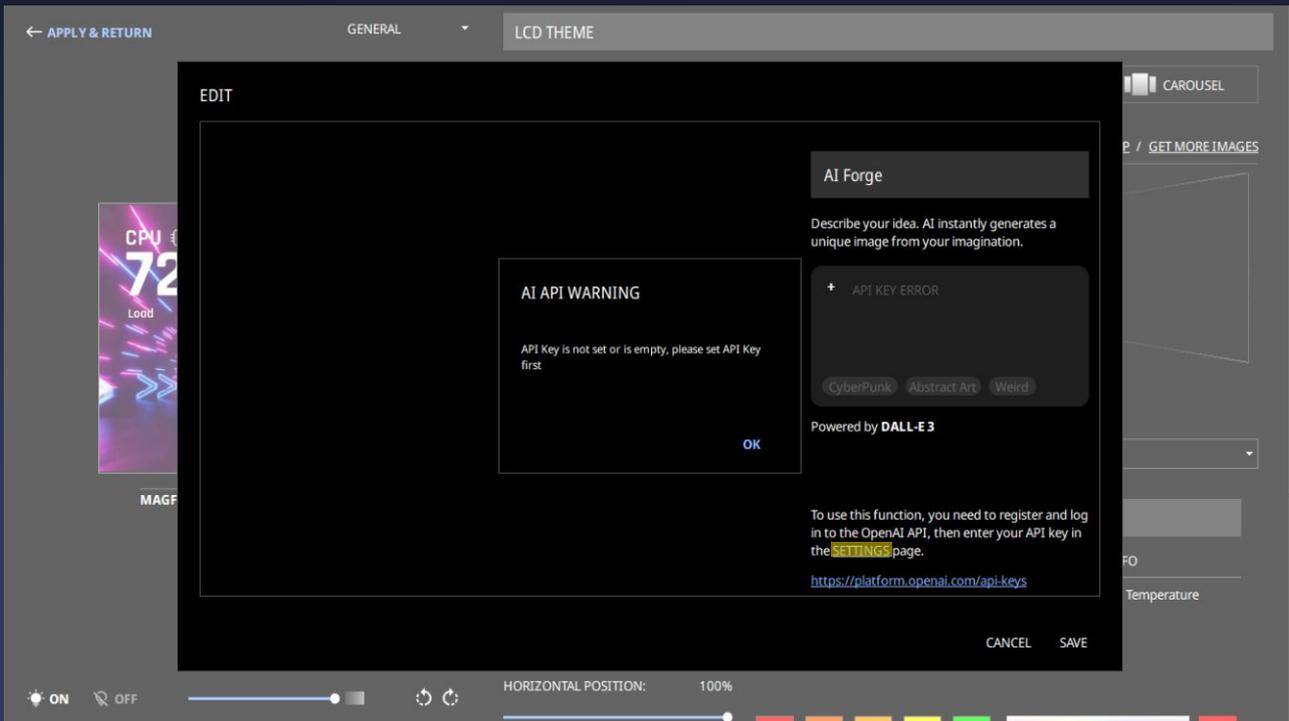


- Obtain the OpenAI API Key. <https://platform.openai.com/api-keys>  
Click **Create new secret key** button to create a key.

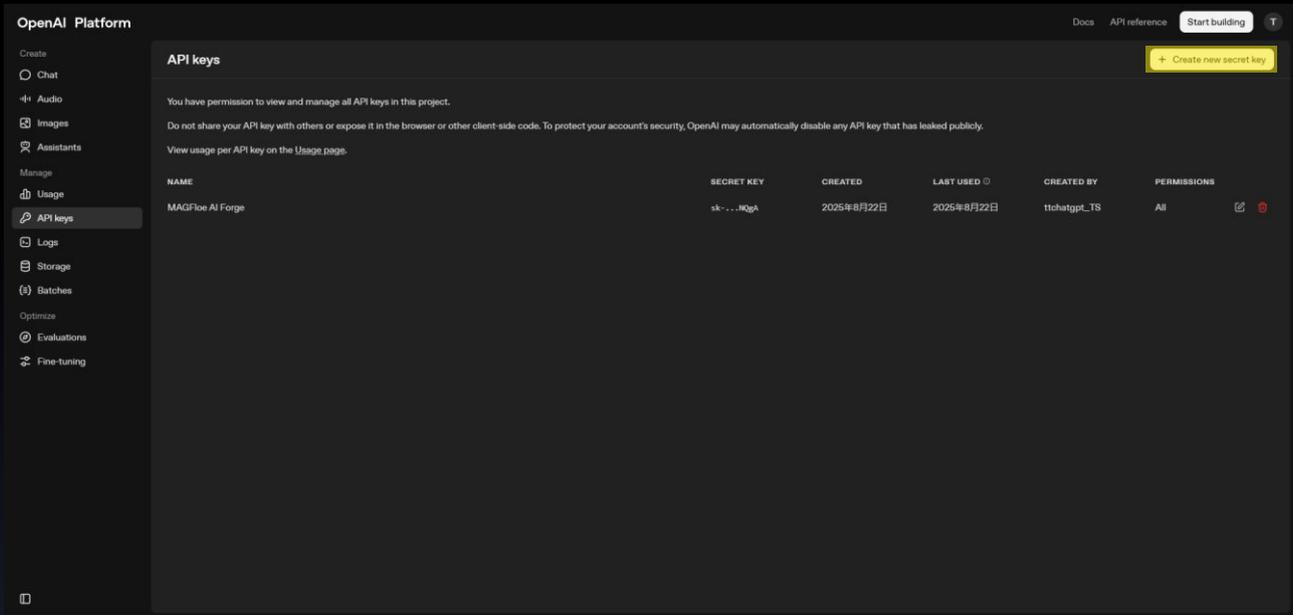


- Create a new secret key.

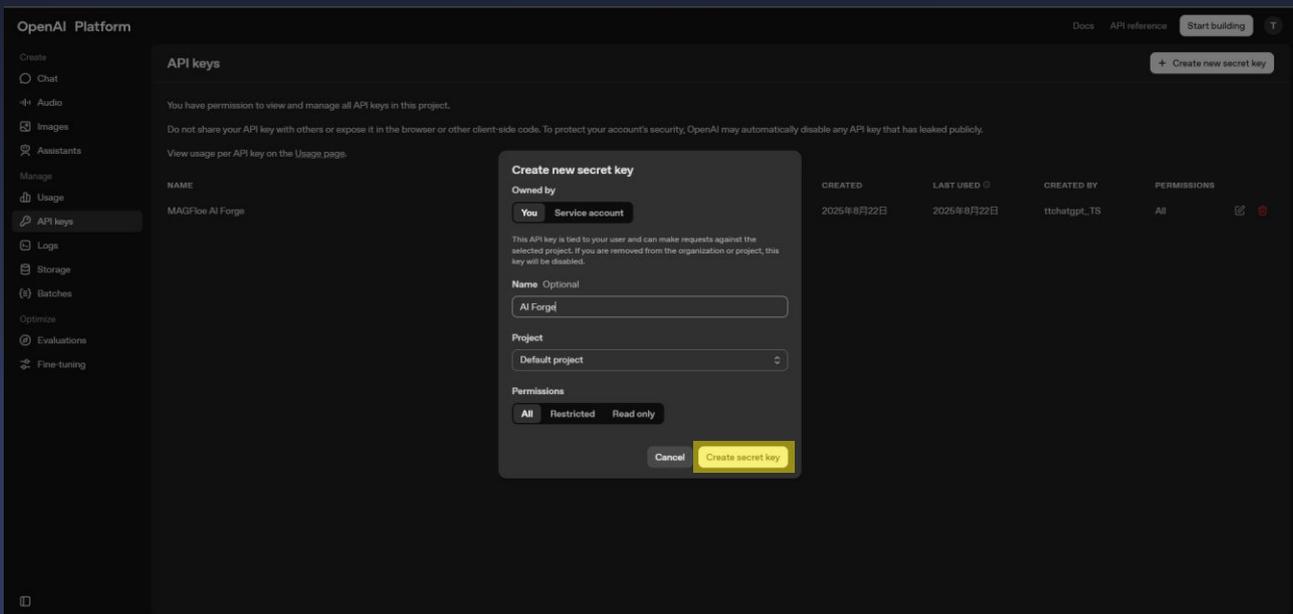

● Click to copy the API key.

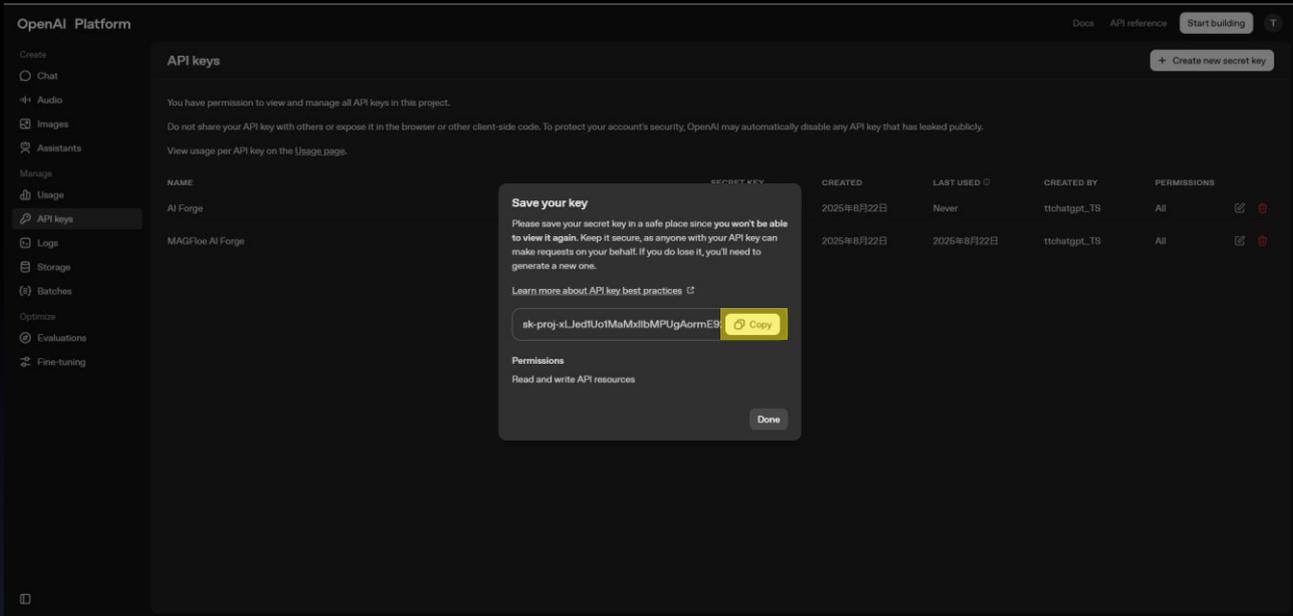


● Input the API key on the **SETTINGS** page.

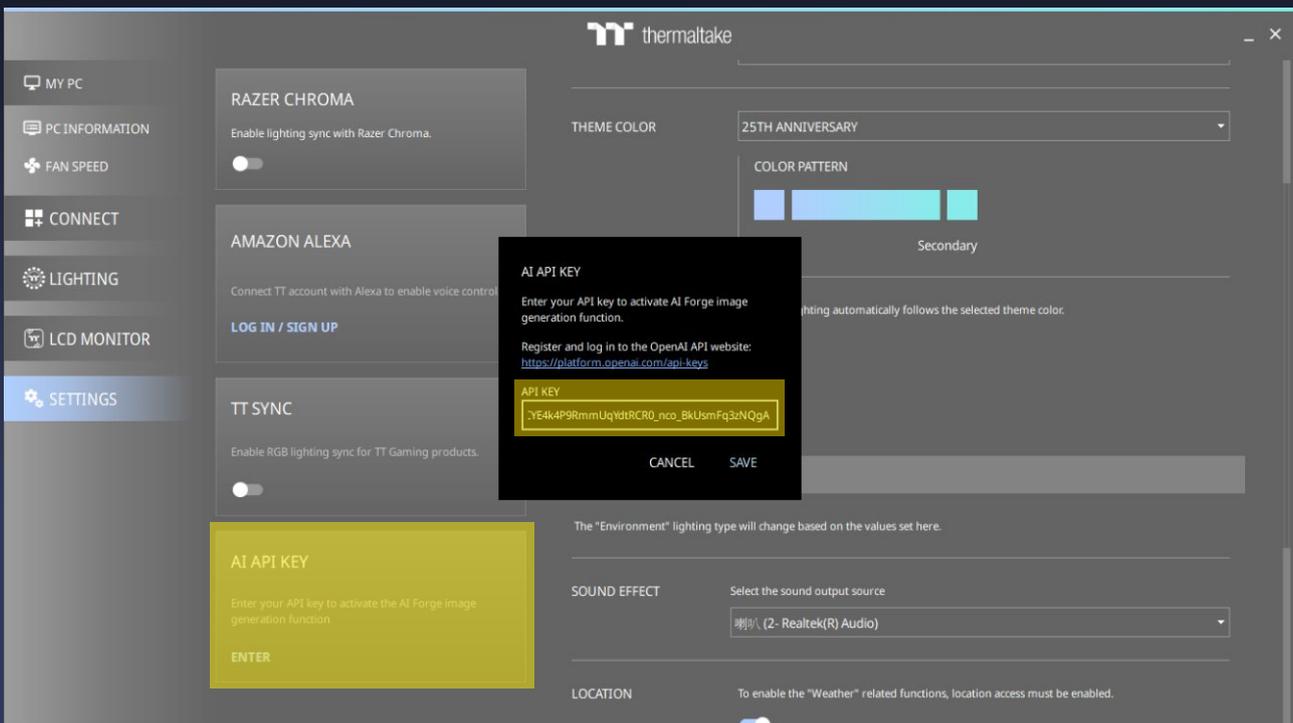



- The AI image generation function in AI Forge requires linking a credit card for payment before use. Click **Add payment details** to bind a credit card.

<https://platform.openai.com/settings/organization/billing/overview>

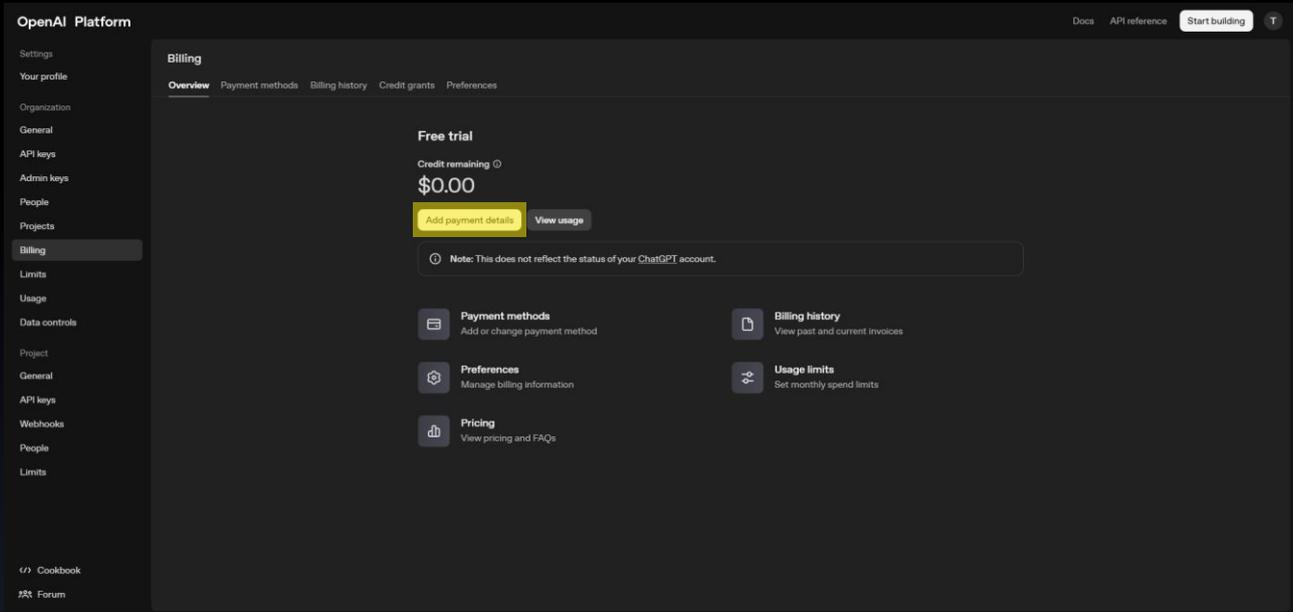

- Now, users can enter prompts in the **AI Forge** image generation function to create images.

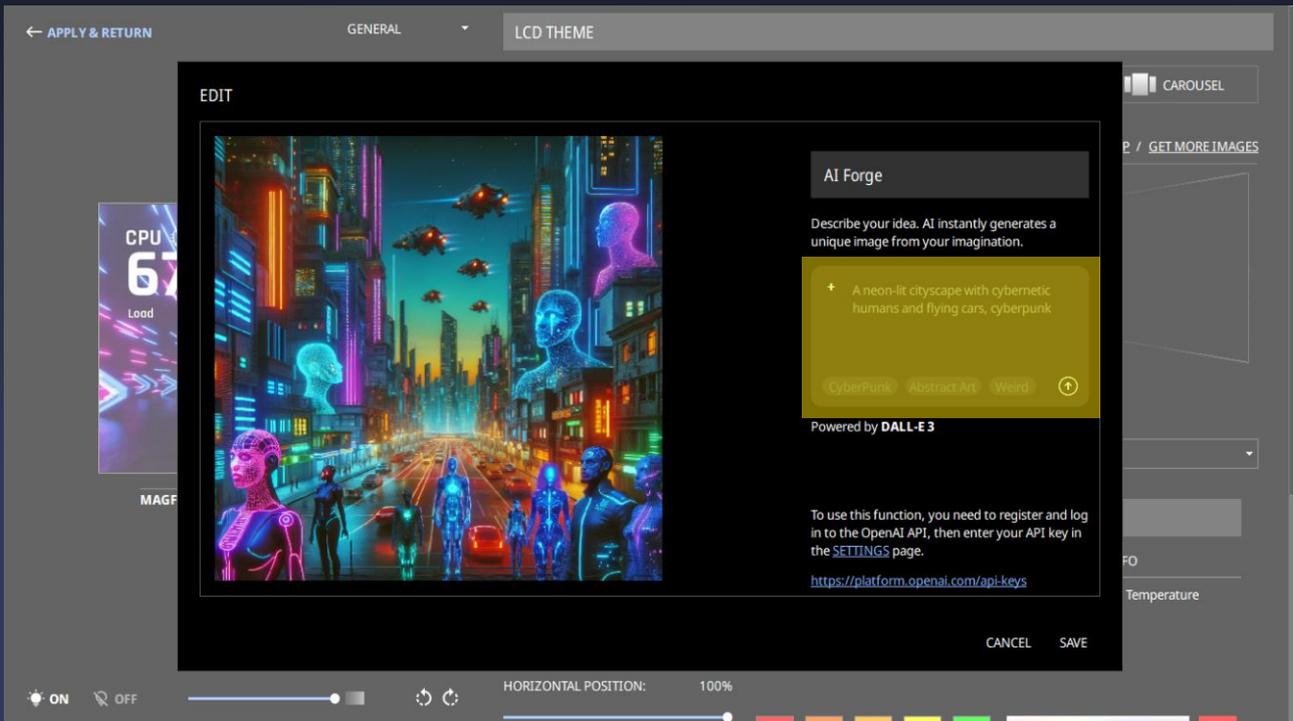

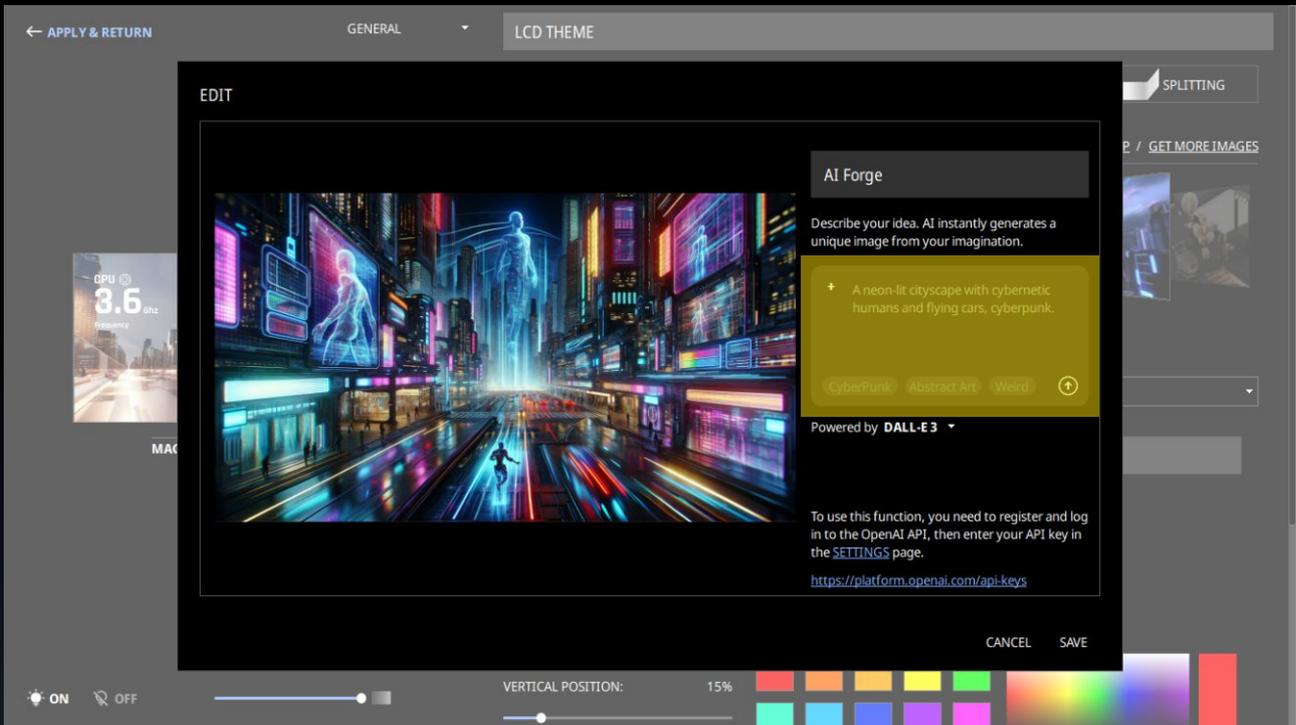

● The images generated by **AI Forge** will show in the **BACKGROUND** after saving.

