

TT RGB PLUS Software control interface

Please download TT RGB PLUS from Thermaltake's Official website.


<https://www.thermaltake.com/downloads>

OS compatibility: Windows 10

TT RGB PLUS Software User Interface


Memory LCD Monitor Water Block

LIGHTING

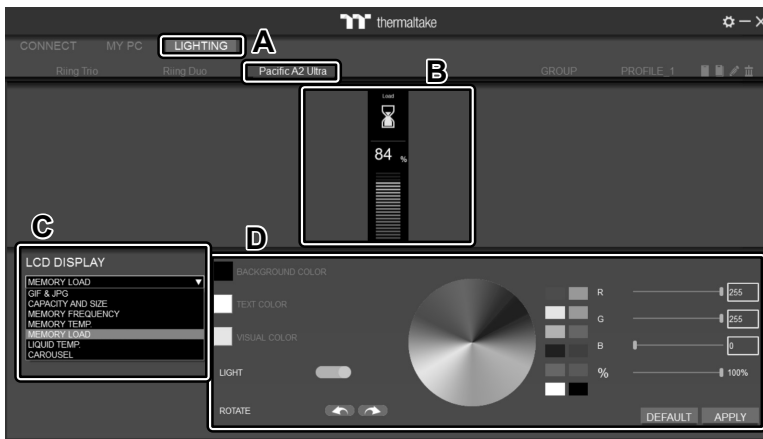


- A. After installation of TT RGB PLUS, you can select "Pacific A2 Ultra" on the "LIGHTING" page.
- B. Preset the memory LCD monitor water block.
- C. LCD DISPLAY function list.
- GIF & JPG (Upload picture to LCD display)
 - CAPACITY AND SIZE
 - MEMORY FREQUENCY
 - MEMORY TEMP.
 - MEMORY LOAD
 - LIQUID TEMP.
 - CAROUSEL (Switches between Memory/Liquid information)
- D. LCD visual effect settings.
Set LCD display background, text and visual color, rotate the LCD screen or turn off LCD.

GIF & JPG

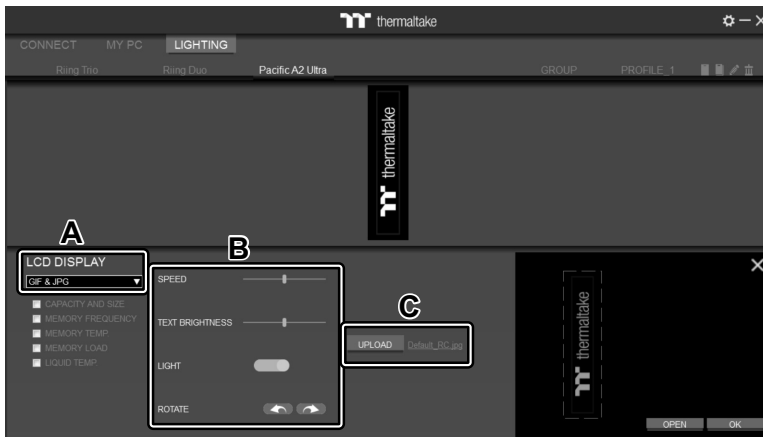

- A. Select "GIF & JPG" form "LCD DISPLAY".
You can upload a GIF or JPG file to show the picture on the LCD screen.
- B. Set the LCD display text information, speed and brightness, rotate the LCD screen or turn off LCD.
- C. Click "UPLOAD" to upload the picture.
(GIF and JPG files only)

SETTINGS

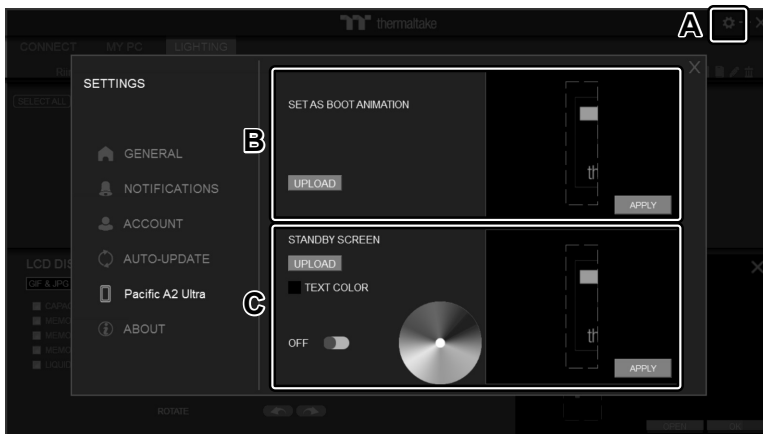

- A. Click the gear icon on the upper right corner to enter the "SETTINGS" menu.
- B. Upload the picture to set as LCD boot animation.
(GIF only)
- C. Upload the picture to set as LCD standby screen.
(JPG only)



software interface may vary with feature update, please download the latest user manual from our www.thermaltake.com