



## Parts List

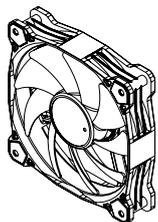

**A** x3  
Fan

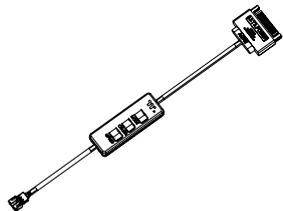

**B** x1  
ARGB Controller




**C** x12  
Long Screw



**D** x12  
Short Screw




**E** x1  
Mainboard Signal  
Bridge Cable  
(ASUS, MSI, GIGABYTE)

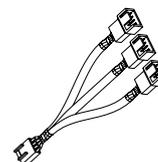


**G** x1  
PWM Cable


## Installation Guide

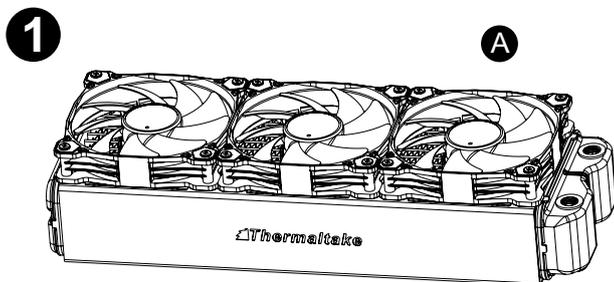


1 Install the fans properly onto the radiator

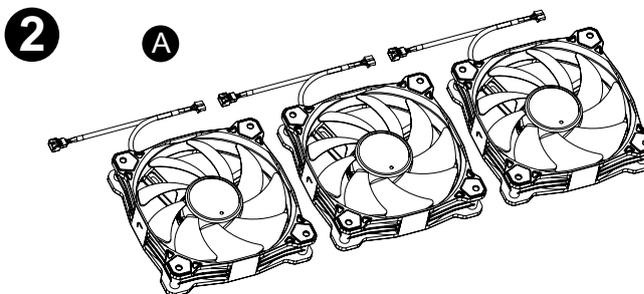

2 Connect the Fans in series

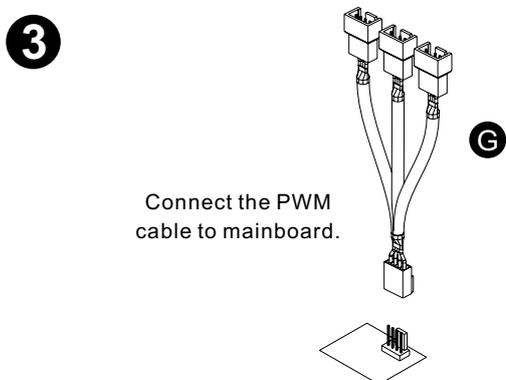


3 Connect the PWM cable to mainboard.

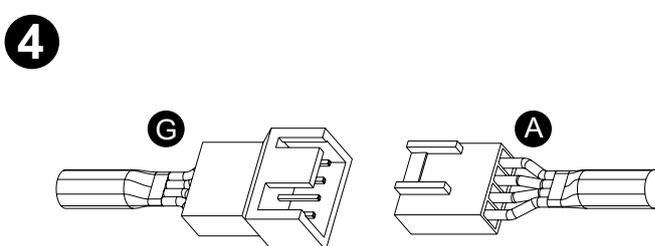


4 Connect the fan power cable to PWM cable

## ARGB Controller Installation Guide

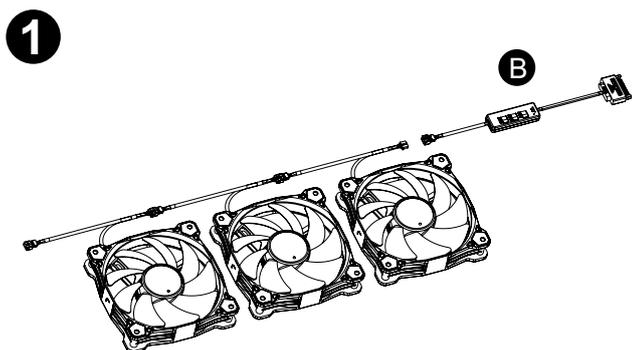

1 Connect the ARGB controller to the Fans.

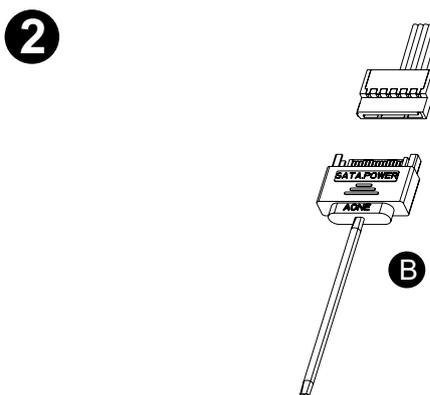


2 Connect the ARGB controller to the SATA connector.

# Mianboard SYNC installation Guide

## CAUTION


Please power off the PC and check the Positive and Negative ends on the connector before connecting the cable to mainboard. Connecting the wrong end can damage the fans.

Connect the Mainboard Signal Bridge Cable to fan led cable

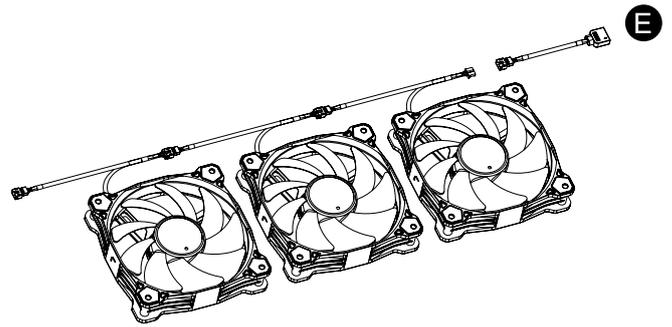


### ASUS

Aura Addressable Strip Header(s)

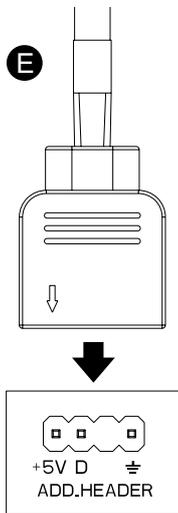


### MSI

JRGB-strip Header(S)

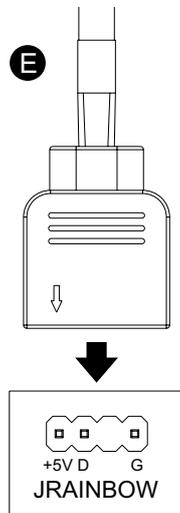


### GIGABYTE

AOURS RGB Fusion with Digital LEDs

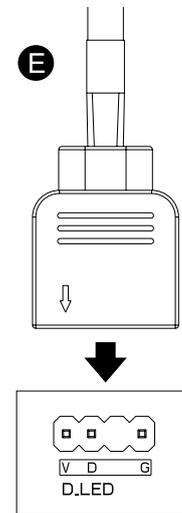

## ARGB Controller

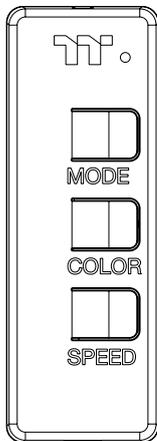

### 1. Light Mode:

Switch over between 7 LED modes.

Rainbow → Full light → RGB Spectrum → Off → Flow → Ripple → Pulse → Blink

### 2. Color Mode:

**When light mode is in Full Lighted, Pulse and Blink :**

Switch over 8 LED colors .

Red → Yellow → Green → Teal → Blue → White → Purple → Rainbow

**When light mode is in Ripple :**

Switch over 7 LED colors .

Red → Yellow → Green → Teal → Blue → White → Purple

**When light mode is in RGB Spectrum:**

Click to memorize and lock the color you want, click again to unlock the 256 colors auto rotation.

**When light mode is in Wave and Flow :**

LED color can not be adjusted.

### 3. Light Speed:

Switch over between 4 light modes.

Slow → Normal → Fast → Extreme