





Parts List

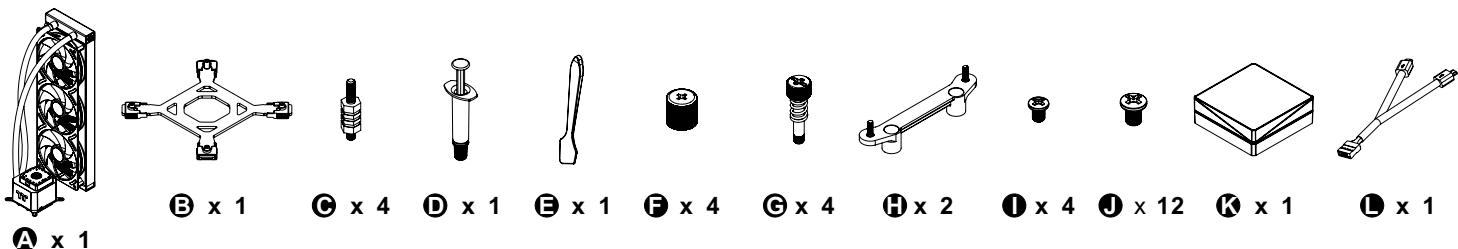


Intel Installation Guide


1 ① 1200/115X ② 1954/1851 ③ 1366

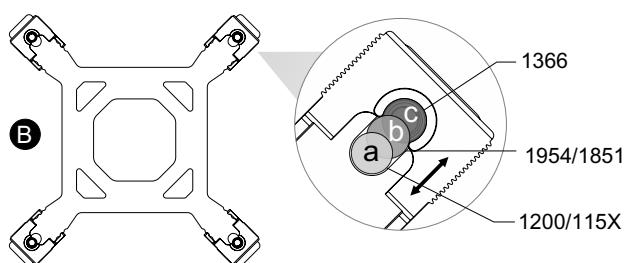

2 1954/1851/1700/1366/1200/115X

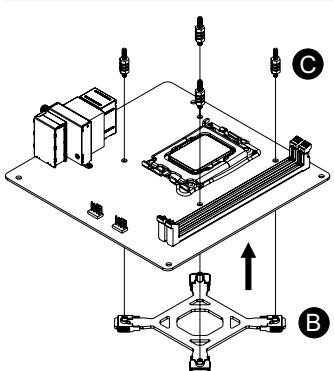


3

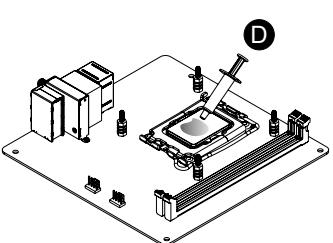


NOTE : Apply the thermal paste evenly with a spatula **E** for better cooling performance.

4 1954/1851/1700/1366/1200/115X

2066/2011-3/2011

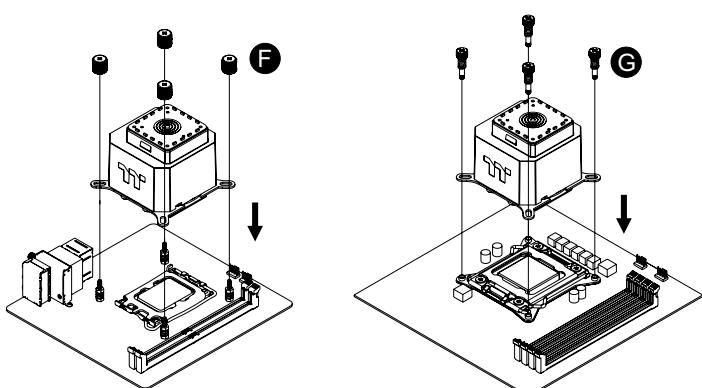


5

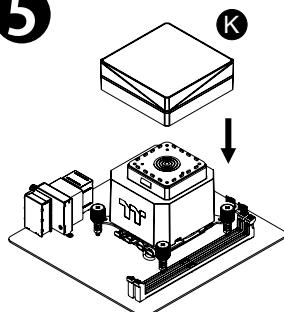


AMD Installation Guide


1

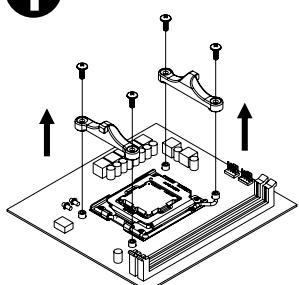


2

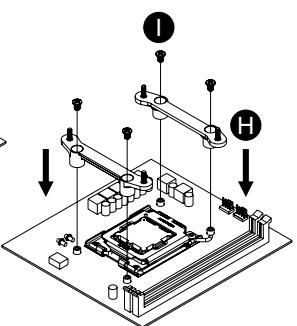

3

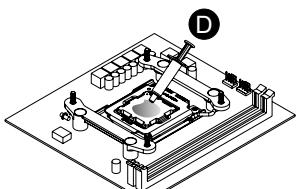


4

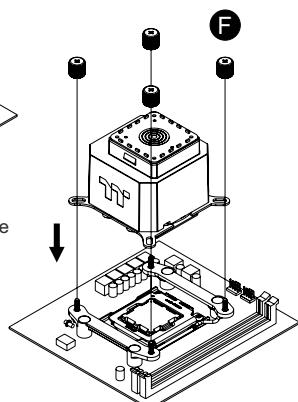


NOTE : Apply the thermal paste evenly with a spatula **E** for better cooling performance.

5


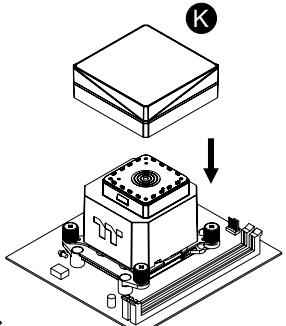


Installation Guide


1

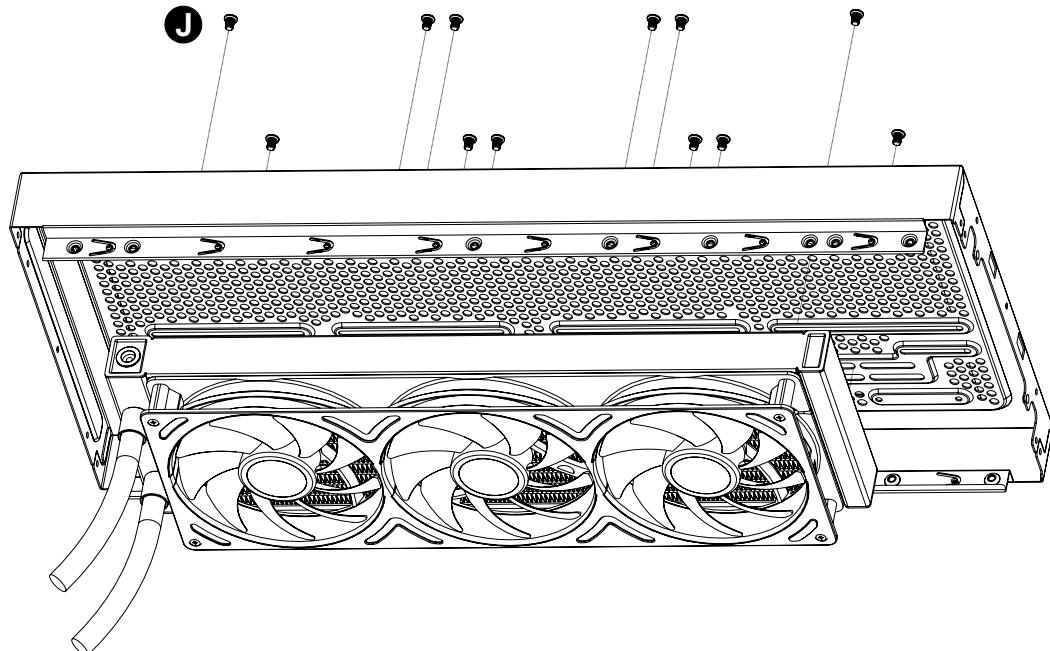

2

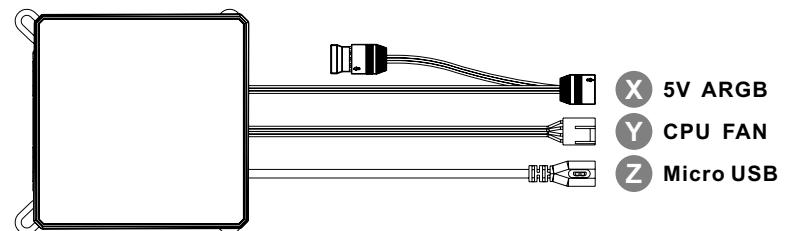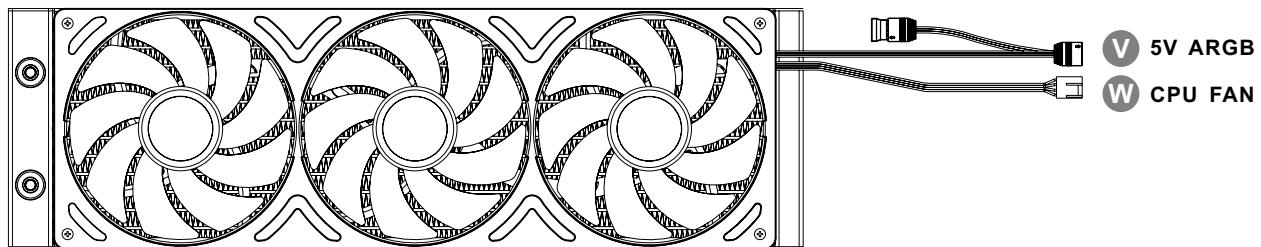

3

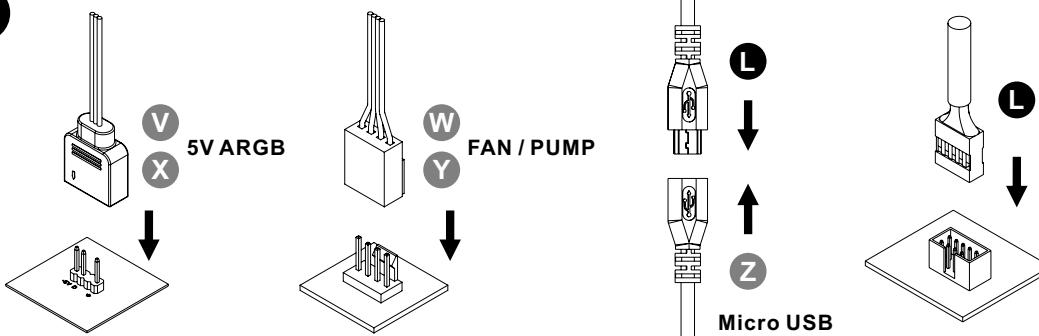

CAUTION
To control the SEGMENT LCD display by SEGMENT LCD Software, Please connect the water block and motherboard with cable L.

CAUTION

Please power off the PC and check the Positive and Negative ends on the connector before connecting the cable to mainboard. Connecting the wrong end can damage the fans.

SEGMENT LCD Software Download

