



TT RGB Plus Software control interface

Please download TT RGB PLUS from Thermaltake's Official website.

<https://www.thermaltake.com/downloads> OS compatibility: Windows 10 & Windows 11

TT Sync V2 Controller Software User Interface

CONNECT - CONTROLLER




- A. After installation of TT RGB PLUS, you can find the "TT SYNC V2 controller" on the "CONNECT" & "CONTROLLER" pages.
B. Click the controller port to make the case fan glow red lighting to pair.
C. Drag and drop to pair the case fan with the controller port.
D. Select the number of PC cooling fans installed.
E. SAVE: Save the controller pairing settings.
RESET: Reset the controller pairing.
RESCAN: Rescan the controllers.

MY PC - FAN SPEED



PC Cooling Fan Speed Information and Settings.


- A. PC Cooling Fan real-time fan speed.
B. NAME: Edit the case fan name.
C. Controller – Port number.

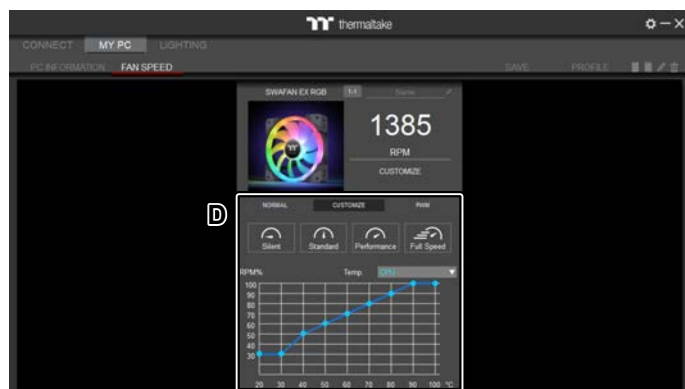

D. ADVANCED OPTIONS

- NORMAL: Set RPM 0% → 100%
- CUSTOMIZE: Silent / Standard / Performance / Full Speed (Base on CPU/GPU Temperature)
- PWM: Set PWM silent (50%) to PWM performance (100%).

LIGHTING

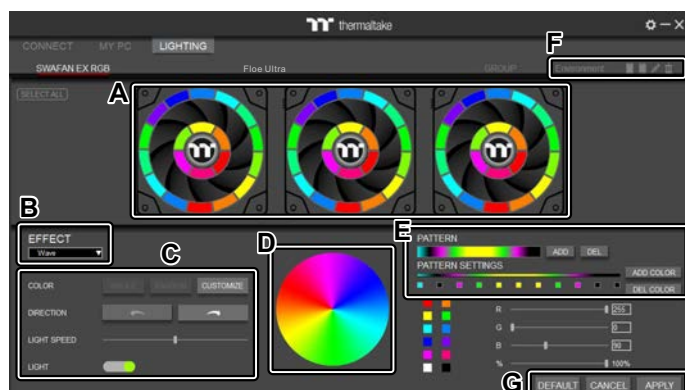

- A. Preview and edit the lighting effect.
B. Select 23 Lighting Effects.
C. Lighting effect settings.
D. Color palette: select lighting color
E. PATTERN: Set up the color pattern ring.
F. Profile Settings: New, Copy, Edit, Delete
G. DEFAULT: Reset the lighting effects.
CANCEL: De-select the LEDs for the preview screen.
APPLY: Execute and store lighting effects.



The software interface may vary with feature updates, please download the latest software version from www.thermaltake.com