thermaltake

LB360-S ARGB Sync

Scan Here
Installation Guide

Parts List

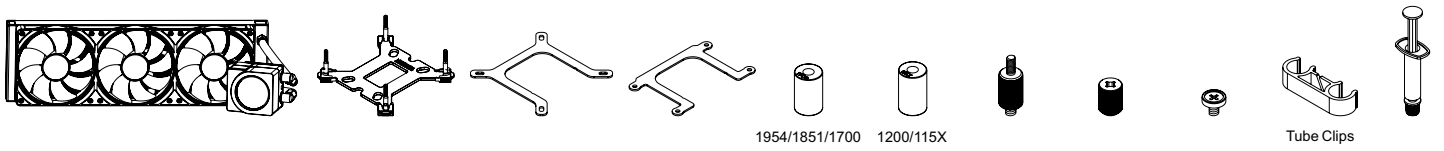

Ⓐ x 1 Ⓑ x 1 Ⓒ x 1 Ⓓ x 1 Ⓔ x 4 Ⓕ x 4 Ⓖ x 4 Ⓗ x 4 Ⓘ x 12 Ⓙ x 2 Ⓚ x 1

Intel Installation Guide

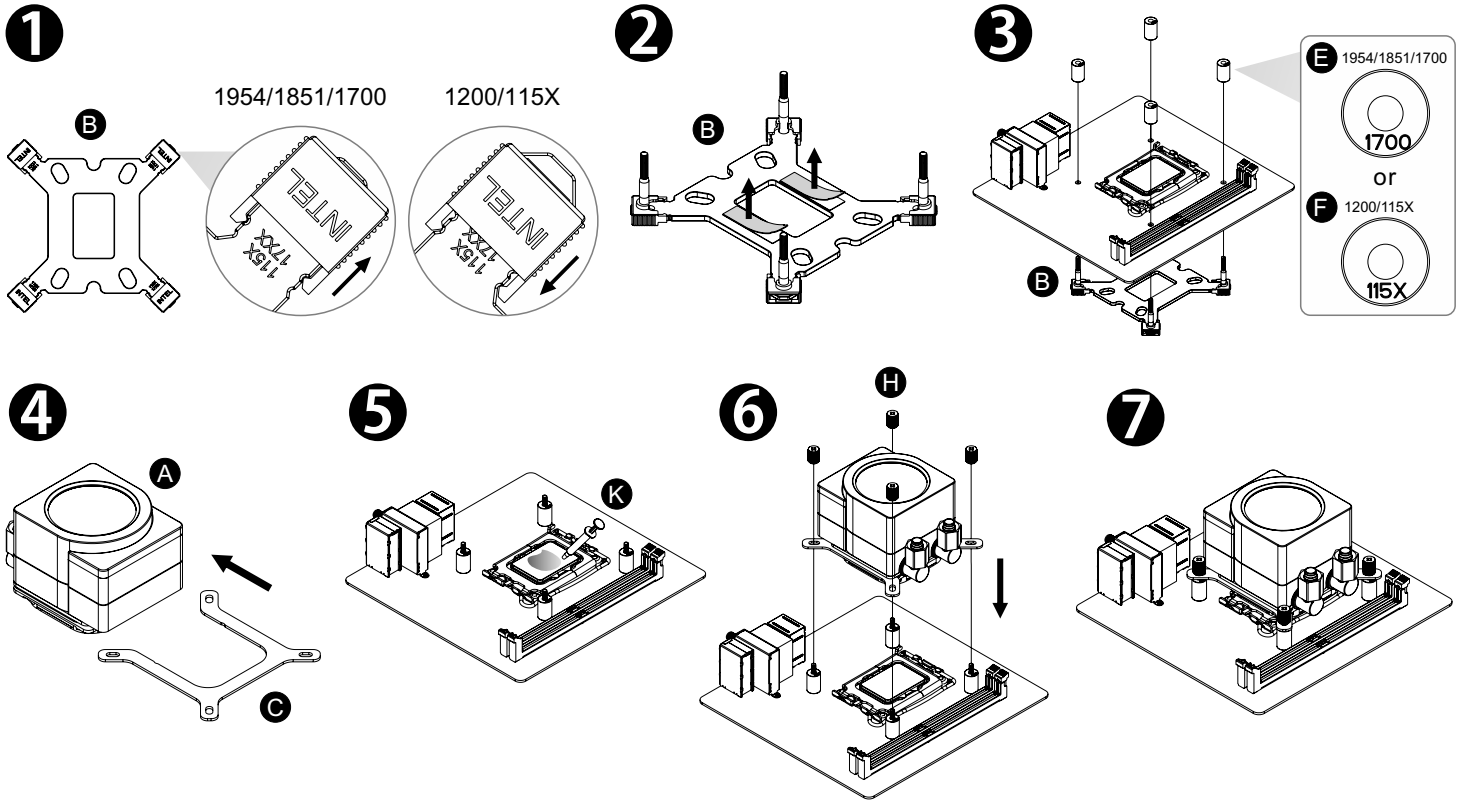

AMD Installation Guide

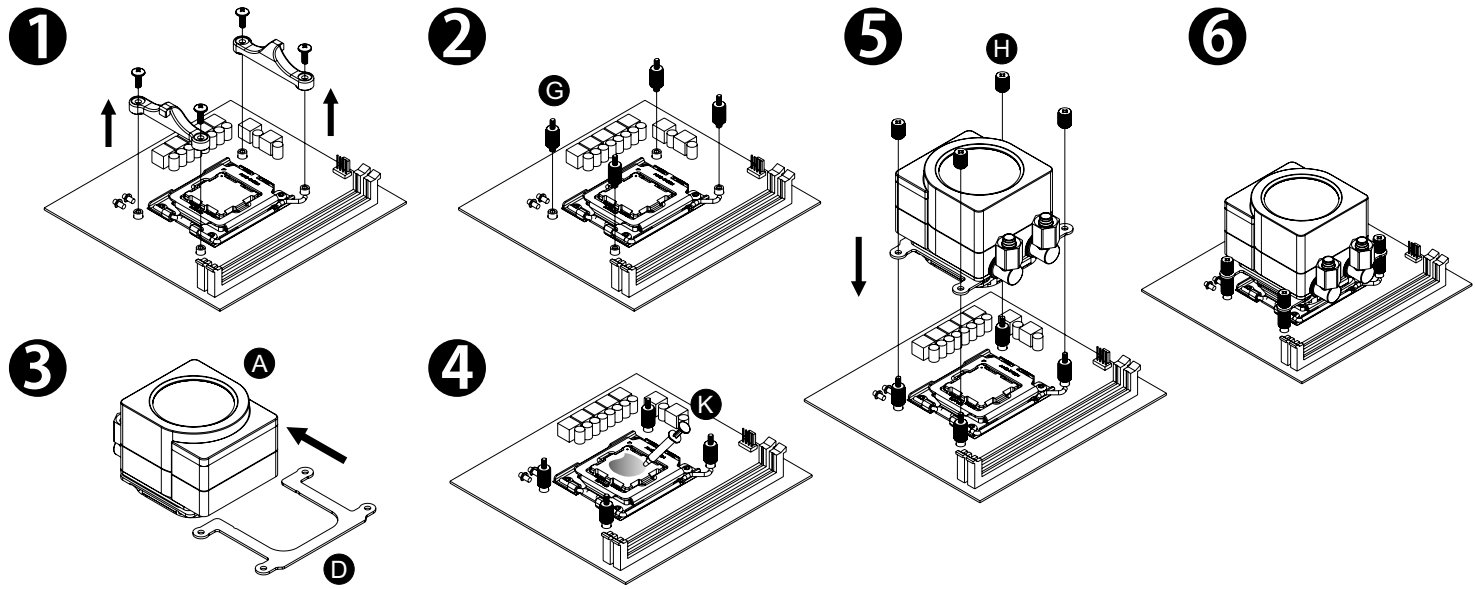

Installation Guide

❶

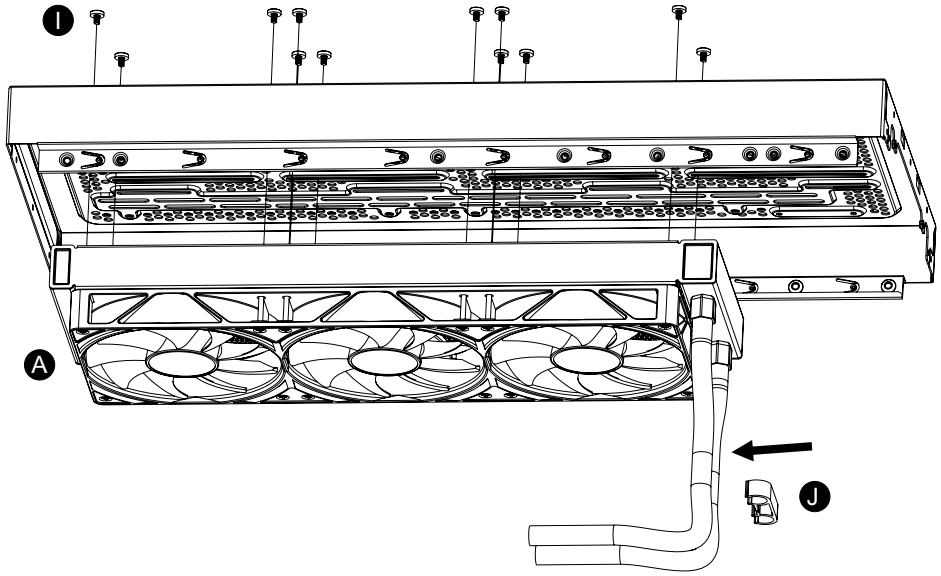

❷

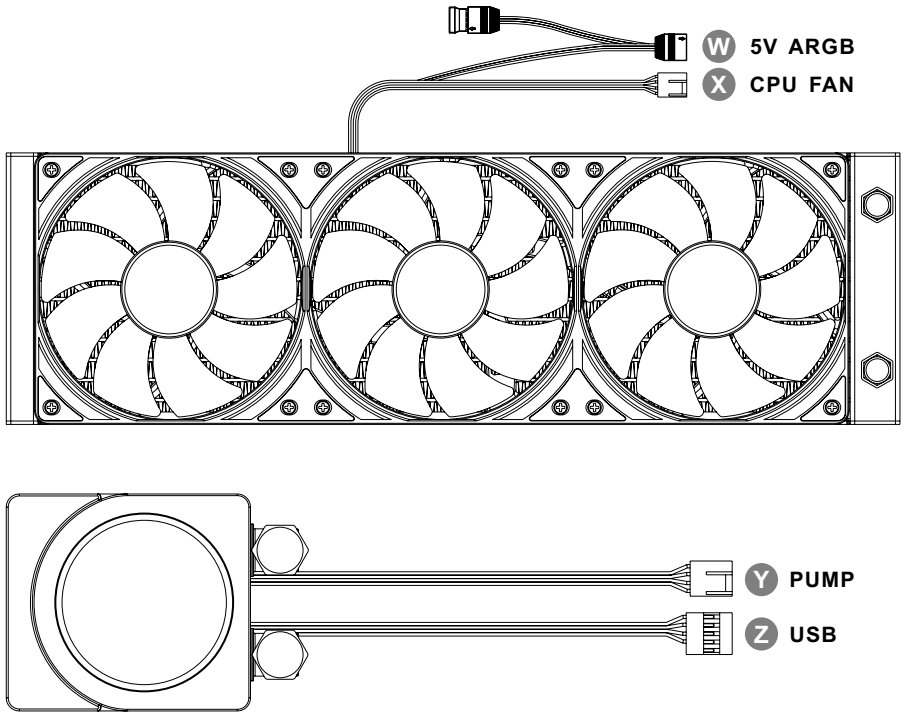

❸

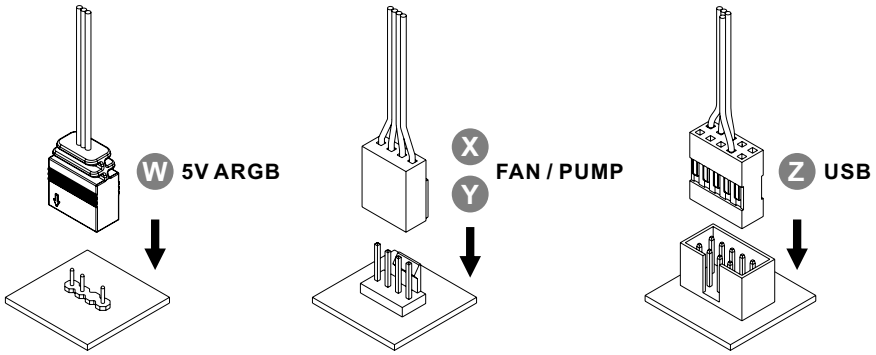

⚠CAUTION

To control the SEGMENT LCD display by SEGMENT LCD Software-B. Please connect the water block and motherboard.

⚠CAUTION

Please power off the PC and check the Positive and Negative ends on the connector before connecting the cable to mainboard. Connecting the wrong end can damage the fans.

SEGMENT LCD Software-B Download

thermaltake

© 2025 Thermaltake Technology Co., Ltd. All Rights Reserved.

www.thermaltake.com

RoHS COMPLIANT CE