## Parts List (*Memory not included.)

B x 3

C x 1 — LGA 1700

D x 1 — LGA 1200/115X

E x 1

F x 2
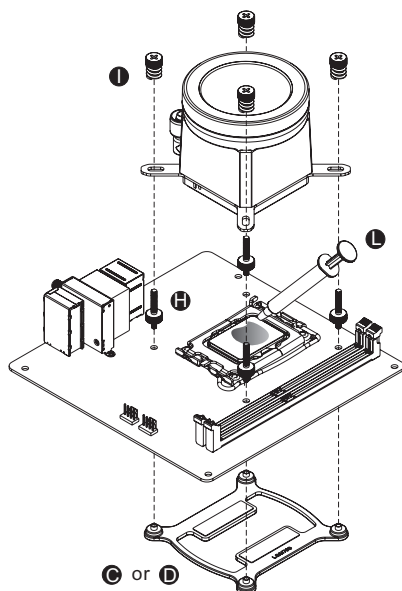
G x 4 — LGA 2066/2011

H x 4 — LGA 1700/1200/115X

A x 1

I x 4

J x 12

K x 12

L x 1

M x 1

N x 1

O x 1

P x 1

Q x 8

## Intel Installation Guide

❶

C — LGA 1700

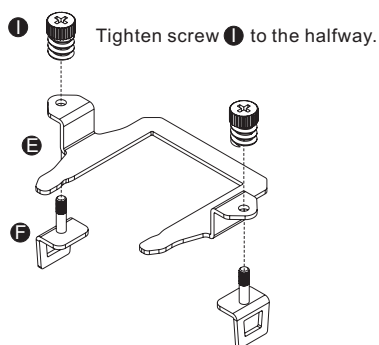LGA1700

D — LGA 1200/115X

115X
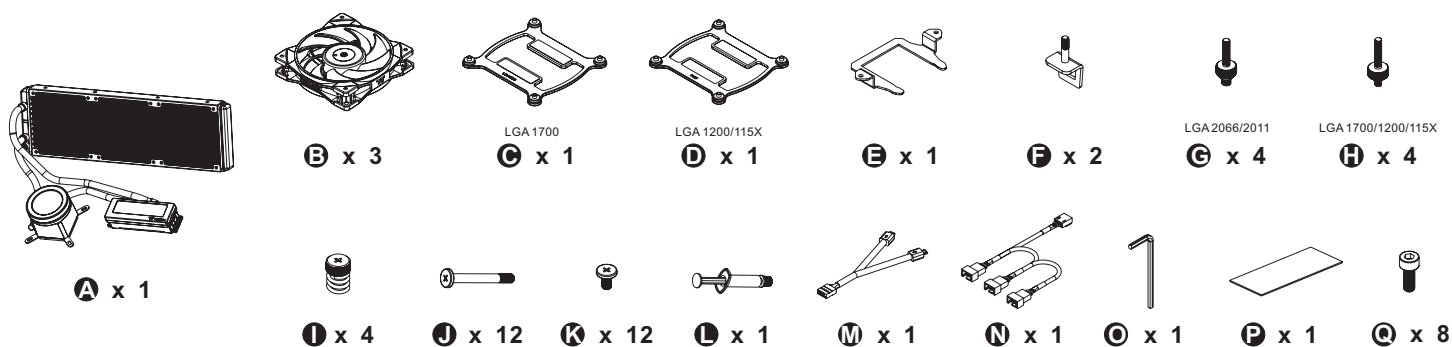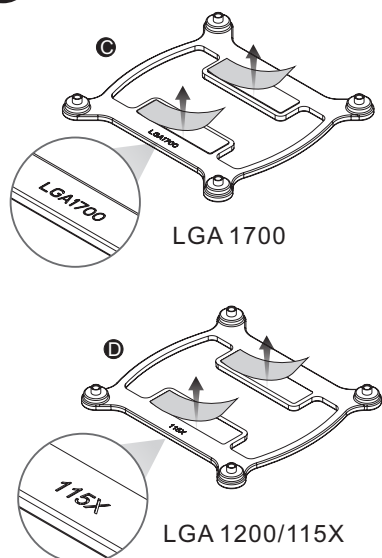
❷ 1700/1200/1156/1155/1151/1150

I H L C or D

2066/2011-3/2011

I G L

## AMD Installation Guide

❶

I E F

Tighten screw I to the halfway.
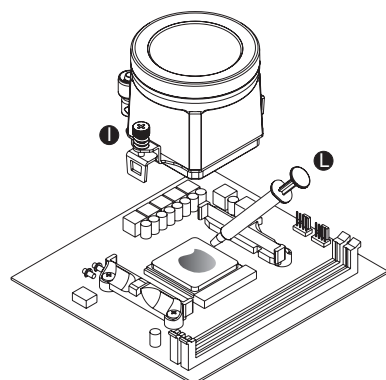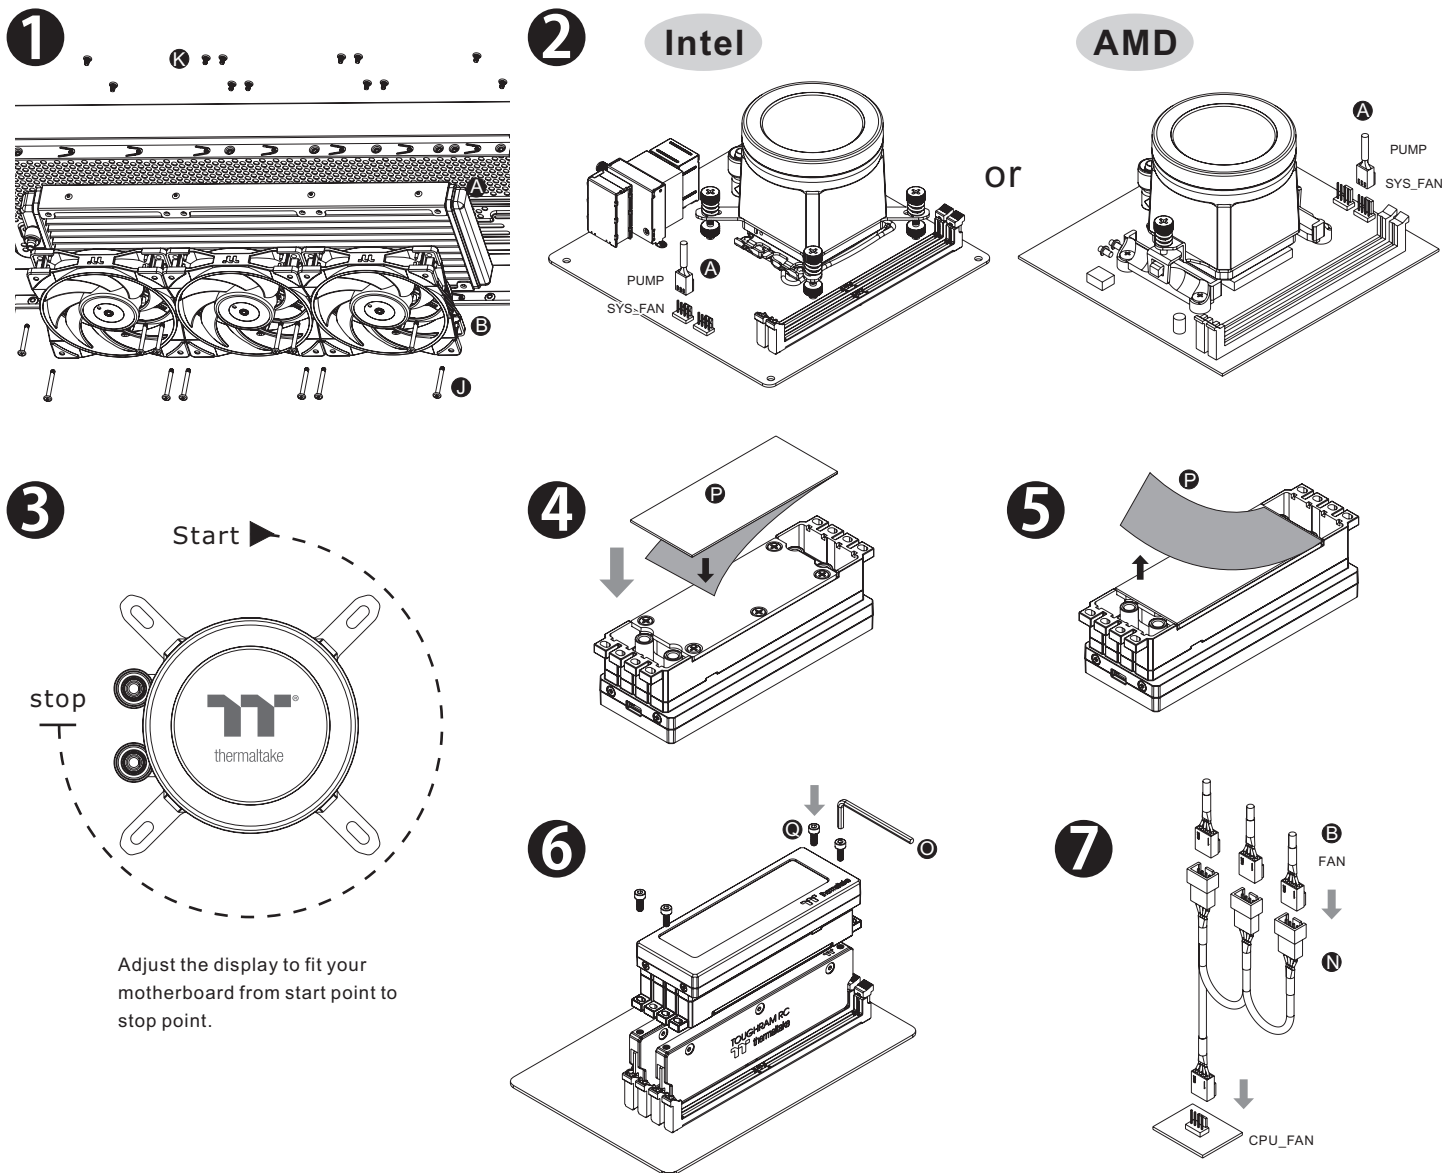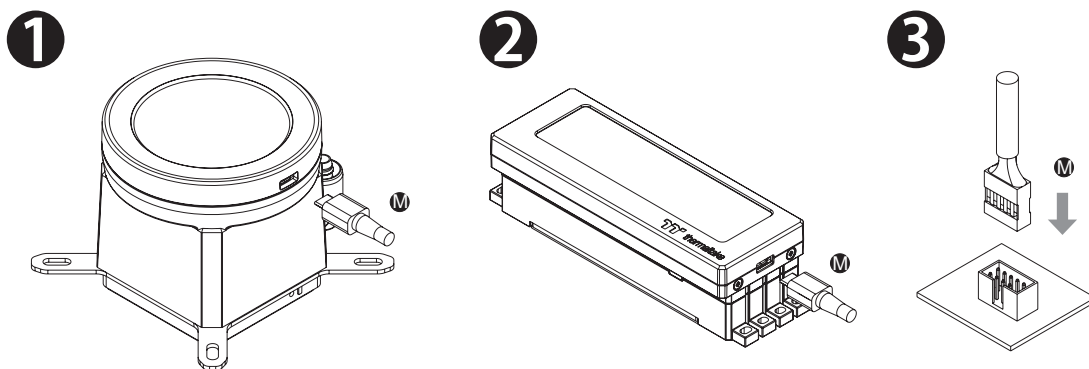
❷

❸
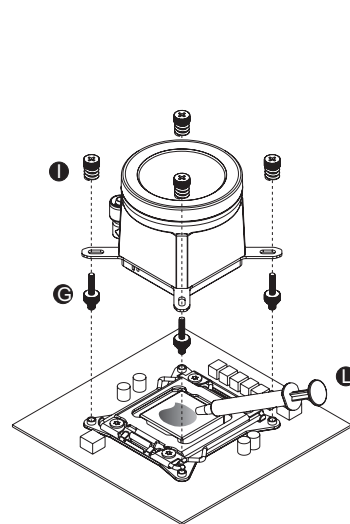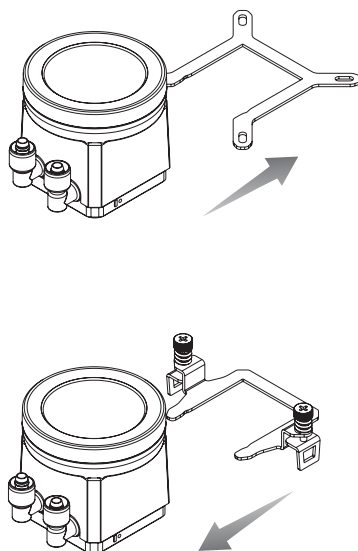
Tighten screw I again to ensure your waterblock is secure enough.

I L

## Installation Guide (*Floe RC Ultra AIO is only compatible with TOUGHRAM RC Series.)

❶

K · · · · · ·
A
B
J

❷ Intel        or        AMD

Intel: PUMP / SYS_FAN / A
AMD: A / PUMP / SYS_FAN

❸

Start ▶
stop

Adjust the display to fit your
motherboard from start point to
stop point.

❹

P

❺

P

❻

Q   O
TOUGHRAM RC

❼

B
FAN
N
CPU_FAN

## MB SYNC Installation Guide

❶

M

❷

M
M

❸

M

⚠ **CAUTION**

To control the LCD display by
TT RGB PLUS Software,
Please connect the water block
and motherboard with cable M.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.