

# Pacific SW1 Plus



This product is intended for installation only by expert users. Please consult with a qualified technician for installation. Improper installation may result in damage to your equipment.

Before you start using this product please follow these basic guidelines:

- 1. Please carefully read through the instruction manual before beginning the installation process.
- 2. Please remove your graphics card from your motherboard to insure the safest process and in order to prevent any possible damages to your CPU and motherboard.
- 3. It is strongly recommended to use market proven pre-mix coolant, such as Thermaltake Coolant Series.

## NARNING: Avoid Aluminum Materials



Install the pinhead of TG-60.

(a) LGA1700



Squeeze certain amount of Liquid Metal Thermal Grease on the CPU. (Please wipe it out if overflowed)




Apply the thermal grease evenly by cotton swabs.




Complete.


### 0 **A** x 1 3 x 2 **9** x 1 ① x 4 (3 x 4 (A) x 4 ♠ x 4 AMD clip Backplate Washer Water Block Screw Screw (Black) (Silver) A 4 ① x 4 (3 x 1 ① x 2 ① x 1 ① x 1 Liquid Metal Screw Screw Pinhead Cotton swabs Alcohol pads Hex Key

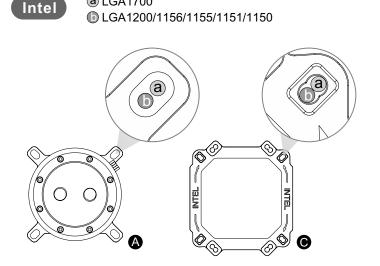




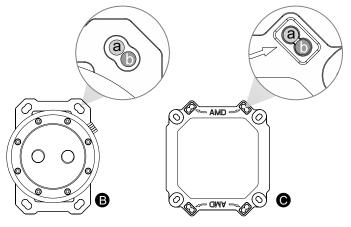


### **LGA 1700/1200/115X**

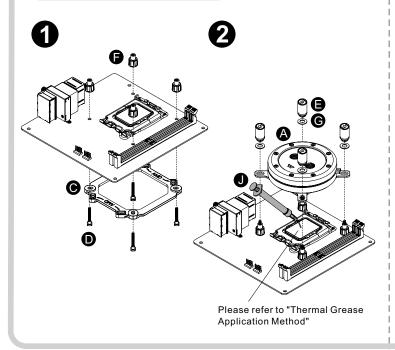


### LGA 2066,2011-3,2011

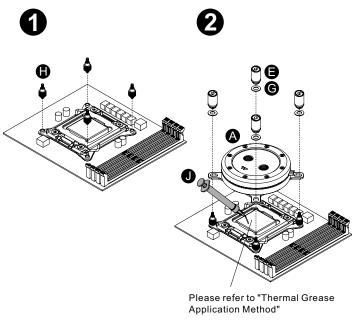


## **AMD Installation Guide**

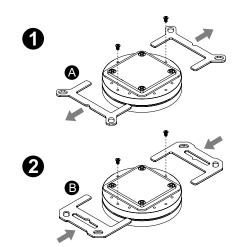


## AM4/AM3/AM2/FM2/FM1

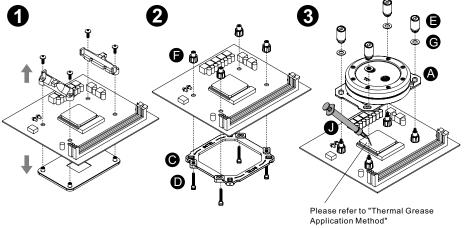

### AM<sub>5</sub>

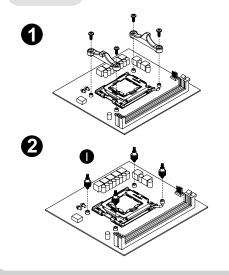

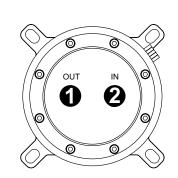

- 1 Out : Circle 1 is designed for liquid outlet
  - In : Circle 2 is designed for liquid inlet/fill



Please refer to "Thermal Grease Application Method"