

Pacific W8



This product is intended for installation only by expert users. Please consult with a qualified technician for installation. Improper installation may result in damage to your equipment.

Before you start using this product please follow these basic guidelines:

- 1. Please carefully read through the instruction manual before beginning the installation process.
- 2. Please remove your graphics card from your motherboard to insure the safest process and in order to prevent any possible damages to your CPU and motherboard.
- 3. It is strongly recommended to use market proven pre-mix coolant, such as Thermaltake Coolant Series.

Thermal Grease Application Method

\Lambda WARNING: Avoid Aluminum Materials



Install the pinhead of TG-60.




Squeeze certain amount of Liquid Metal Thermal Grease on the CPU. (Please wipe it out if overflowed)




Apply the thermal grease evenly by cotton swabs.



Complete.

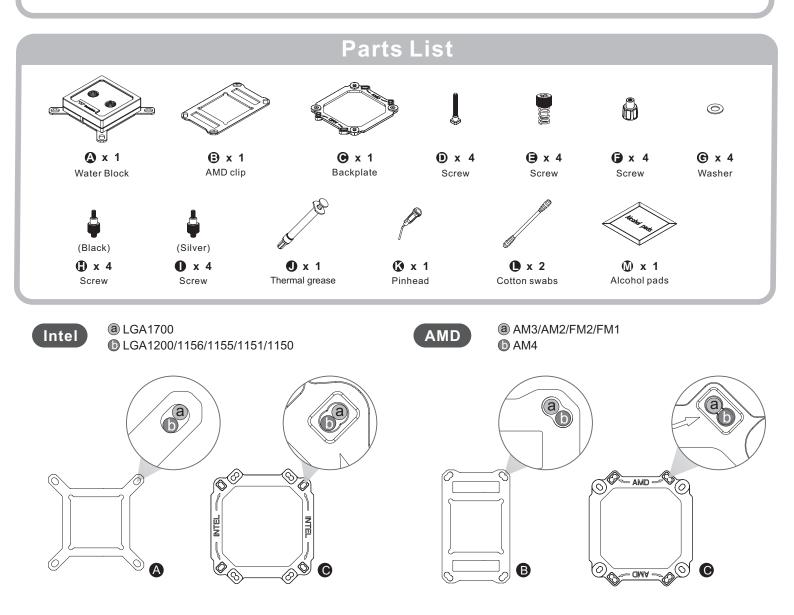

Intel Installation Guide

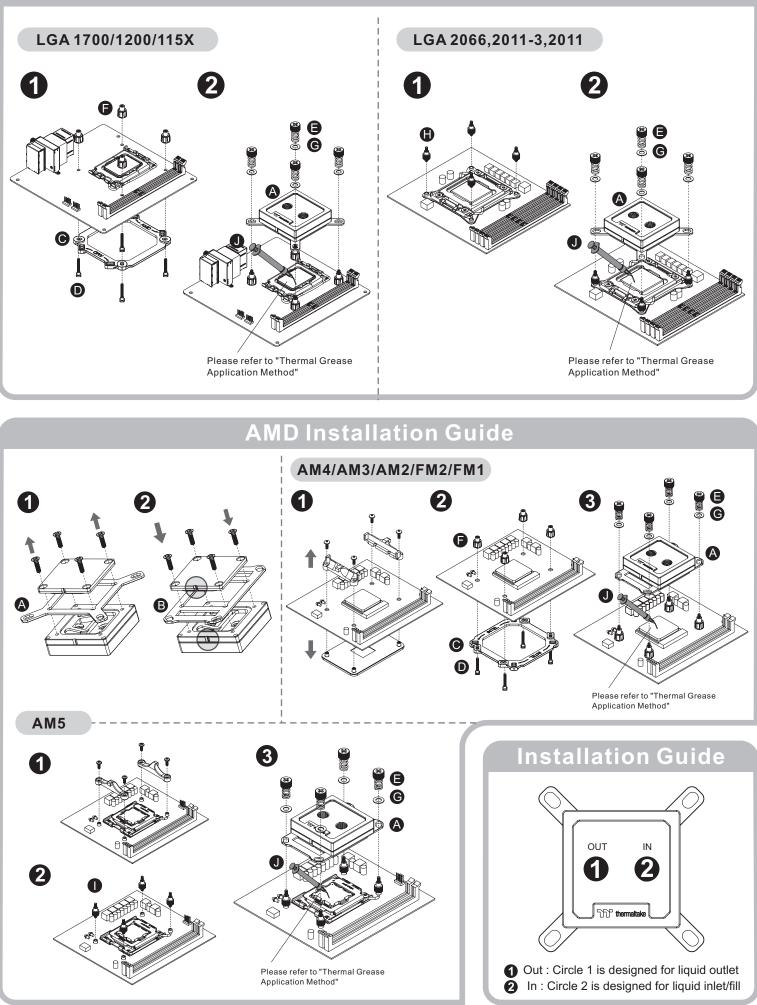

* thermaltake

ROHS UKCE