

Pacific W9



This product is intended for installation only by expert users. Please consult with a qualified technician for installation. Improper installation may result in damage to your equipment.

Before you start using this product please follow these basic guidelines:

- 1. Please carefully read through the instruction manual before beginning the installation process.
- 2. Please remove your graphics card from your motherboard to insure the safest process and in order to prevent any possible damages to your CPU and motherboard.
- 3. It is strongly recommended to use market proven pre-mix coolant, such as Thermaltake Coolant Series.

Thermal Grease Application Method

NARNING: Avoid Aluminum Materials



Install the pinhead of TG-60



Squeeze certain amount of Liquid Metal Thermal Grease on the CPU. (Please wipe it out if overflowed)

Thermal grease



Apply the thermal grease evenly by cotton swabs.



Complete.

Parts List 0 B x 1 (x 1 ① x 4 (a) x 4 (3) x 4 @ x 4 Water Block AMD clip Backplate Washer Screw (Black) (Silver) ① x 4 ① x 4 ① x 1 x 1 ① x 2 ① x 1

Pinhead




Screw

a LGA1700

(I) LGA1200/1156/1155/1151/1150


Screw

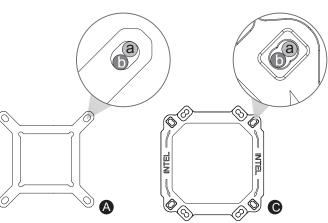

AMD

a AM3/AM2/FM2/FM1 AM4

Cotton swabs

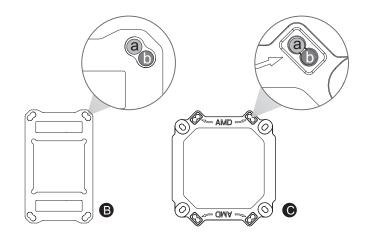



Alcohol pads


Intel Installation Guide LGA 1700/1200/115X LGA 2066,2011-3,2011

Please refer to "Thermal Grease

Application Method"

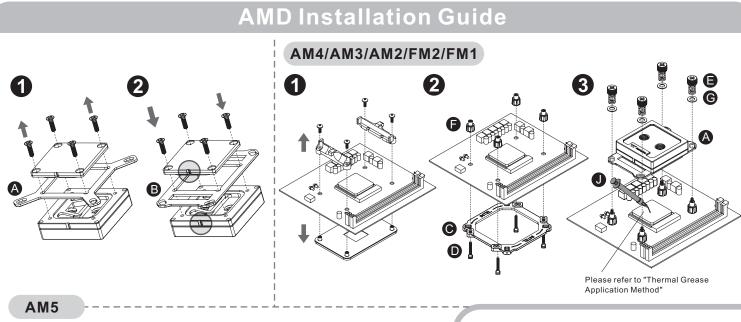

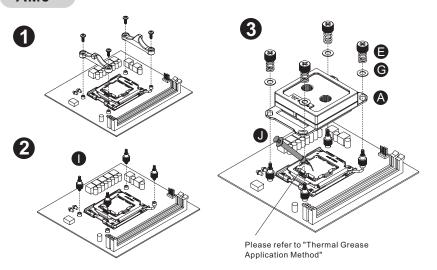

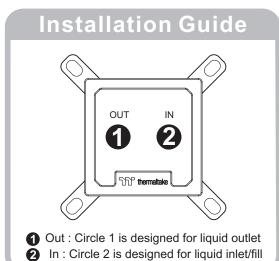

Please refer to "Thermal Grease

Application Method"